

GIPC-B6218.1.92.250430

## Release Notes

Zhejiang Uniview Technologies Co., Ltd

# GIPC-B6218.1.92.250430

## Release Notes

**Keywords:** Version information, version upgrade

**Abstract:** This document provides detailed version information and upgrade procedure  
forGIPC-B6218.1.92.250430.

**Acronym:**

Acronym	Full Name
IPC	IP Camera

# Content

- 1 Version Information..... 3
  - 1.1 Version Number .....3
  - 1.2 Release History .....3
  - 1.3 Version Mapping Table.....3
- 2 Feature and Change Description ..... 4
- 3 Version Upgrade Description ..... 4
- 4 Version Upgrade Procedure ..... 4
  - 4.1 Upgrade Overview .....4
    - 4.1.1 Version Upgrade Environment.....4
  - 4.2 Upgrade Procedure .....5
    - 4.2.1 Upgrade Through the Web .....5
- 5 Version Upgrade Disclaimer ..... 6

# 1 Version Information

## 1.1 Version Number

GIPC-B6218.1.92.250430

## 1.2 Release History

Table1Released versions

Version No.	Basic Version No.	Released On	Remarks
GIPC-B6218.1.92.250430	GIPC-B6218.1.88.250310	2025-05-08	Improved release

## 1.3 Version Mapping Table

Table2 Version mapping table

Product Mapping Item	Version No. (For External)
NVR	B3613.39.20.240613

Table3Product models and corresponding versions

Product Series	IPC Series
Series	IPC2318LE、IPC3518LE、IPC3628LE、IPC2B14SE、IPC3234SE、IPC3634SE IPC3528SR、IPC3528LE、IPC2B18SE、IPC3638SE、IPC2124SS、IPC2128SS、IPC3614SS、 IPC3618SS
Models	IPC2318LE series: IPC2318LE-ADF28KM-WP、IPC2318LE-ADF40KM-WP
	IPC3518LE series: IPC3518LE-ADF28K-WP、IPC3518LE-ADF40K-WP
	IPC3628LE series:IPC3628LE-ADF28K-WP、IPC3628LE-ADF40K-WP
	IPC2B14SE series:IPC2B14SE-ADF28K-WP-I1、IPC2B14SE-ADF40K-WP-I1
	IPC3234SE series:IPC3234SE-ADF28K-WP-I1、IPC3234SE-ADF40K-WP-I1
	IPC3634SE series:IPC3634SE-ADF28K-WP-I1、IPC3634SE-ADF40K-WP-I1
	IPC3528SR series: IPC3528SR-ADF28KM-WP
	IPC3528LE series: IPC3528LE-ADF40K-WP
	IPC2B18SE series: IPC2B18SE-ADF28K-WP-I1、IPC2B18SE-ADF40K-WP-I1
	IPC3638SE series: IPC3638SE-ADF28K-WP-I1、IPC3638SE-ADF40K-WP-I1
	IPC2124SS series: IPC2124SS-ADF28KMC-I1、IPC2124SS-ADF40KMC-I1
	IPC2128SS series: IPC2128SS-ADF28KMC-I1、IPC2128SS-ADF40KMC-I1
	IPC3614SS series: IPC3614SS-ADF28KMC-I1、IPC3614SS-ADF40KMC-I1
	IPC3618SS series: IPC3618SS-ADF28KMC-I1、IPC3618SS-ADF40KMC-I1
Target file name	GIPC-B6218.1.92.250430.zip

## 2 Feature and Change Description

P88D2407: GIPC-B6218.1.88.250310

None

P87D2407: GIPC-B6218.1.87.250208

None

P85D2407: GIPC-B6218.1.85.250113

None

P81D2407: GIPC-B6218.1.81.241218

Item	Feature	Description
Newly added features	New added models	IPC3528SR-ADF28KM-WP IPC3528LE-ADF40K-WP IPC2B18SE-ADF28K-WP-I1 IPC2B18SE-ADF40K-WP-I1 IPC3638SE-ADF28K-WP-I1 IPC3638SE-ADF40K-WP-I1
Improved features	None	None
Deleted features	None	None

## 3 Version Upgrade Description

None.


## 4 Version Upgrade Procedure

### 4.1 Upgrade Overview

#### 4.1.1 Version Upgrade Environment

##### 1. Network Architecture for Upgrade

Figure 1Network architecture

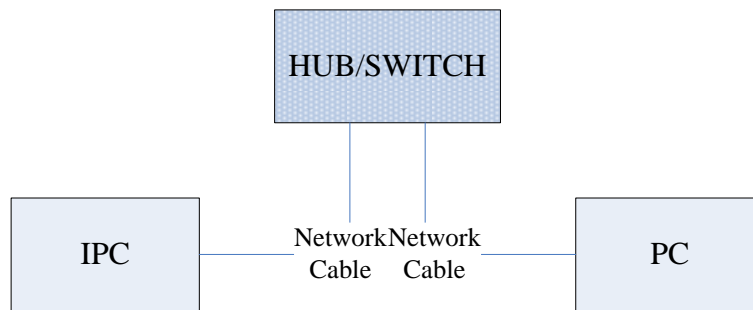

As shown in this figure, the version files are stored on the PC that is connected to the IPCs through the network.

## 4.2 Upgrade Procedure

### 4.2.1 Upgrade Through the Web

- (1) Log in to the Web interface as **admin** (default password: 123456).
- (2) Click **Setup>System>Maintenance**. The **Maintenance** page is displayed.

<b>Firmware Upgrade</b>	
Upgrade File	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upgrade"/> <input type="checkbox"/> Upgrade Boot Program
<b>Device Restart</b>	
<input type="button" value="Restart"/>	Restart the device.
<input type="checkbox"/> Enable Auto Restart	Each Day <input type="button" value="v"/> 02:00:00 <input type="button" value="L"/> <input type="button" value="OK"/>
<b>Config Management</b>	
<input type="button" value="Default"/>	Keep current network and user settings and restore other settings to defaults.
Importing	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Import"/>
Exporting	<input type="text" value="C:\Users\Desktop\lftp"/> <input type="button" value="Browse..."/> <input type="button" value="Export"/>
<b>Diagnosis Info</b>	
Storage Path	<input type="text" value="C:\Users\MyLocalFiles\Debug\"/> <input type="button" value="Browse..."/> <input type="button" value="Download"/>

- (3) Click **Browse** in the **Firmware Upgrade** area. In the **Select** dialog box that appears, select the upgrade file package, for example, IPC\_G6218-XXXXX.zip, and then click **Open**.

**Maintenance**

---

**Firmware Upgrade**

Upgrade File    ☐ Upgrade Boot Program

---

**Device Restart**

Restart the device.

☐ Enable Auto Restart

---

**Config Management**

Keep current network and user settings and restore other settings to defaults.

Importing

Exporting

---

**Diagnosis Info**

Storage Path

- (4) Click **Upgrade**. You cannot operate on other pages during the upgrade process.
- (5) Wait till the upgrade is completed. A message appears to indicate successful upgrade and prompt you to log in again after the device restarts.

## 5 Version Upgrade Disclaimer

1. By setting or installing this program in any way you agree to all of the following terms and conditions. Your downloading or using the program means you acknowledge your full understanding and acceptance of the following terms and conditions. If you do not agree to any of the following terms, you shall not use the program and you must cease installing and delete the program immediately.
2. The upgrade program is only applicable to the intended regions and product models. Before upgrade or update, please read the release notes carefully to make sure the program is applicable to your region and product model. You will be fully liable and responsible for all the consequences of device abnormality and related maintenance costs caused by your improper operations.
3. Uniview owns or is legally authorized to own all rights and IPRs (Intellectual Property Rights) of the program and the supplied release notes.
4. Software upgrades are for the optimization of product functions and do not mean there is defect.
5. You must strictly follow instructions in the release notes during the upgrade process, otherwise you are responsible for the possible consequences and related maintenance costs.
6. You shall not engage in any of the following activities, otherwise you would be liable for infringement and responsible for any adverse consequences arising therefrom.
  - 6.1 Copy the program (exclude the reasonable and necessary copies for internal backups);
  - 6.2 Exclude this statement when using the program or transfer the program to any third party;

- 6.3 Modify the program or its derivatives;
- 6.4 Reverse engineer, decompile or disassemble this program.
- 7. The program is only intended for authorized users. Its architecture, organization and source code are valuable trade secrets and confidential information owned by Uniview and its authorized parties. You agree not to provide or disclose any confidential information contained in or derived from the software to any third party. No part of this document may be excerpted, reproduced, or distributed in any form by any entity or individual without written consent from our company.