

UNV-Link Mobile App Datasheet

UNV-Link—iOS





Overview

UNV-Link is a lite version of mobile AIoT application intended for small business and enterprise users. It provides a wide range of functions including live view, playback, PTZ control, two-way audio, device sharing, alarm notification, and file management on Android and iOS mobile phones and allow users to view the desired videos on-the-go.

Features

- Add devices: Supports quick adding by QR code scanning.
- Allows multiple users to view the same video contents simultaneously through device sharing or by logging in to the same account from multiple clients.
- Rich features:
- Live view: Multi-window preview, PTZ control, preset patrol, image settings, two-way audio, video quality adjustment, snapshot, local recording, corridor mode, and swipe left/right to switch live video of the previous/next camera.
- Playback: Recording search, synchronous playback, split search, playback speeds, playback of recordings saved on an SD card.
- Alarm: User can receive real-time alarms and view alarm-related recordings.
- Device configuration: User can configure time, image, video, audio, OSD, PTZ, motion detection, human body detection, audio detection, automatic tracking, smart intrusion prevention, disarming, custom alarm sound, recording schedule, etc.
- Device management: User can share devices, cancel sharing, transfer devices.
- Cloud account management: Allows user to sign up using mobile phone number/email address, edit account information, retrieve password, and cancel account.
- File management: Allows user to sort files by device/time/type (image/video), export to album, and share through third-party



applications.

• Device maintenance: User can upgrade device by cloud, export diagnostic information, and test network speed.

Specifications

Add Device Connection Specs Recommended: 100 Devices Or Less. Supported Devices Provices Can Only Be Added As Cloud Devices. Device Adding Method Add Wired Device, Wi-Fi Device, And 4G Device By Scanning QR Code. Rearrange Devices Support. Tap The Button And Then Drag A Device To The Desired Position. Cloud Upgrade Cloud Upgrade Upgrade IPC, NVR, And NVR-Connected IPC Through Cloud. Restart Device Restart Device Support. Share Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account. Allows User To Retrieve Device Under The User'S Cloud Account. Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Notification Alert Allows User To Enable/ Disable Alarm Messages.	Model	UNV-Link-iOS		
Connection Specs Recommended: 100 Devices Or Less. IPC, NVR, Doorbell (Overseas Only). Devices Can Only Be Added As Cloud Devices. Add Wired Device, Wi-Fi Device, And 4G Device By Scanning QR Code. Rearrange Devices Rearrange Devices Support. Tap The Button And Then Drag A Device To The Desired Position. Cloud Upgrade Cloud Upgrade Upgrade IPC, NVR, And NVR-Connected IPC Through Cloud. Restart Device Restart Device Support. Share Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Account Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address. Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address. Allows User To Retrieve Device Under The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version.		ONV EIIIK 103		
IPC, NVR, Doorbell (Overseas Only). Devices Can Only Be Added As Cloud Devices.		Pacammandad: 100 Davisas Or Lass		
Device Adding Method Add Wired Device, Wi-Fi Device, And 4G Device By Scanning QR Code. Rearrange Devices Rearrange Devices Support. Tap The Button And Then Drag A Device To The Desired Position. Cloud Upgrade Cloud Upgrade Upgrade IPC, NVR, And NVR-Connected IPC Through Cloud. Restart Device Support. Share Device Support. Share Functions Share Functions (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/Email Address Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/Email Phone Number/Email Address. Allows User To Retrieve Device To Be A Cloud Device. Get Device Security Code: Cloud Account. Get Device Security Code: Cloud Account. Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. Prerequisites: (1) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Connection Specs			
Device Adding Method Rearrange Devices Rearrange Devices Support. Tap The Button And Then Drag A Device To The Desired Position. Cloud Upgrade Cloud Upgrade Cloud Upgrade Upgrade IPC, NVR, And NVR-Connected IPC Through Cloud. Restart Device Restart Device Support. Share Device (1) Allows User To Sate Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Account Allows User To Retrieve Password For A Device To Be A Cloud Device. (2) The User Has Logged In To The Cloud Account. Prerequisites: (1) Allows User To Change Device Under The User'S Cloud Account. (2) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR Remote Configuration Of NVR Allows User To Enable/ Disable Allows Bassages.	Supported Devices	-		
Rearrange Devices Support. Tap The Button And Then Drag A Device To The Desired Position. Cloud Upgrade Cloud Upgrade Cloud Upgrade Restart Device Restart Device Share Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account. Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address. Get Device Security Code: Cloud Account. Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Device Adding Method			
Rearrange Devices Support. Tap The Button And Then Drag A Device To The Desired Position. Cloud Upgrade Upgrade Upgrade IPC, NVR, And NVR-Connected IPC Through Cloud. Restart Device Restart Device Share Pevice (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Account Get Device Security Code: Cloud Account Account Ci The Device Is A Cloud Device Under The Device To Be A Cloud Device. Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Perequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	-	Add whed bevice, with bevice, And 40 bevice by Scanning QN code.		
Rearrange Devices Tap The Button And Then Drag A Device To The Desired Position. Cloud Upgrade Cloud Upgrade Upgrade IPC, NVR, And NVR-Connected IPC Through Cloud. Restart Device Restart Device Support. Share Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Get Device Security Code: Cloud Account Account Account Account Account Account Account Account Cladius User To Change Device Under The User'S Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info Cladius User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Realitating Devices	Support		
Cloud Upgrade Cloud Upgrade Upgrade IPC, NVR, And NVR-Connected IPC Through Cloud. Restart Device Restart Device Share Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Get Device Security Code: Cloud Account Account Account Account Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Account Account Account Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Rearrange Devices			
Cloud Upgrade Upgrade IPC, NVR, And NVR-Connected IPC Through Cloud. Restart Device Restart Device Support. Share Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info Device Info (2) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Allows User To Enable/ Disable Alarm Messages.	Cloud Ungrado	Tap The Button And Then Diag A Device To the Desired Position.		
Restart Device Restart Device Restart Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number Device Password Using A Registered Mobile Phone Number/ Email Address. Get Device Security Code: Cloud Account Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		Lingrado IDC MVP And MVP Connected IDC Through Cloud		
Restart Device Share Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		opgrade IPC, NVR, Alid NVR-Collifected IPC Tillough Cloud.		
Share Device (1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number				
(1) Allows User To Share Live Video, Ptz Control, Two-Way Audio, Alarm Message, Search And Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number Penail Address Get Device Security Code: Cloud Account Account Account Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address. Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address. Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		Support.		
Share Functions Playback, And Device Configuration Permissions. (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Share Device			
Share Functions (2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel Sharing. Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.				
Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number Device Password Using A Registered Mobile Phone Number Email Address Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Share Functions	, ,		
Transfer Device Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number Device Password Using A Registered Mobile Phone Number/ Email Address Adlows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		(2) Allows User To Set Sharing Period And Permissions, View/ Edit Sharing History, Cancel		
Transfer Device Support (Only Within China). Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number Device Password Using A Registered Mobile Phone Number/ Email Address Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		Sharing.		
Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Mobile Phone Number/ Email Address Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Transfer Device			
Get Device Security Code: Mobile Phone Number/ Email Address Get Device Security Code: Cloud Account Allows User To Retrieve Password Using A Registered Mobile Phone Number/ Email Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Transfer Device	Support (Only Within China).		
Phone Number/ Email Address Address. This Function Does Not Require The Device To Be A Cloud Device. Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Get Device Security Code: Mobile Ph	one Number/ Email Address		
Get Device Security Code: Cloud Account Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Get Device Security Code: Mobile	Allows User To Retrieve Device Password Using A Registered Mobile Phone Number/ Email		
Allows User To Retrieve Password For A Device Under His/Her Cloud Account. Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Phone Number/ Email Address	Address. This Function Does Not Require The Device To Be A Cloud Device.		
Prerequisites: (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Get Device Security Code: Cloud Acc	ount		
Get Device Security Code: Cloud Account (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		Allows User To Retrieve Password For A Device Under His/Her Cloud Account.		
Account (1) The Device Is A Cloud Device Under The User'S Cloud Account. (2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Cat Davias Casurity Cada Claud	Prerequisites:		
(2) The User Has Logged In To The Cloud Account In The App. (3) The Device Is Online. Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		(1) The Device Is A Cloud Device Under The User'S Cloud Account.		
Device Info (1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Account	(2) The User Has Logged In To The Cloud Account In The App.		
(1) Allows User To Change Device Name, View Device Version, Model, And Serial Number. (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		(3) The Device Is Online.		
Device Info (2) Allows User To Change The Access Protocol. (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Device Info			
Device Info (3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.	Device Info	(1) Allows User To Change Device Name, View Device Version, Model, And Serial Number.		
(3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device Version. Remote Configuration Of NVR Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		(2) Allows User To Change The Access Protocol.		
Remote Configuration Of NVR Remote Configuration Of NVR: Allows User To Enable/ Disable Alarm Messages.		(3) For An NVR-Connected IPC, User Can Only Change The Device Name And View The Device		
Remote Configuration Of NVR: Allows User To Enable / Disable Alarm Messages.		Version.		
Allows User To Enable/ Disable Alarm Messages.	Remote Configuration Of NVR			
Allows User To Enable/ Disable Alarm Messages.	Remote Configuration Of NVR:			
		Allows User To Enable/ Disable Alarm Messages.		





Remote Configuration Of NVR: Time Configuration	(1) Allows User To Configure Time And Time Zone And Sync The Settings To The Device.Overseas Servers Support DST Configuration.(2) Supports Syncing The Mobile Phone'S Time (Not Including DST) To The Device.	
Remote Configuration Of NVR: Disarming	Allows User To Select Multiple Channels To Set Arming/ Disarming.	
Remote Configuration Of NVR: Storage Configuration	(1) Enable/ Disable Data Overwriting When Storage Is Full.(2) Configure Recording Schedule In Batches: Select Channels, Recording Type (All Or Motion Detection) And Time (Monday To Sunday).	
Remote Configuration Of NVR-Conn	ected IPC	
Remote Configuration Of NVR-Connected IPC: Image Configuration	Smart Illumination (IR, White Light, Smart Dual-Light).	
Remote Configuration Of NVR-Connected IPC: Audio Configuration	Allows User To Configure Audio Input Volume, Audio Output Volume, And Alarm Output Volume.	
Remote Configuration Of NVR-Connected IPC: Motion Detection	 (1) Allows User To Enable/ Disable Motion Detection, Draw Detection Area, Set Detection Time (Cross-Day Allowed), Detection Sensitivity, And Alarm Snapshot. (2) Alarm Snapshot Is Controlled Together By Two Settings On The Device Side (Channel Configuration>Motion Detection>Alarm-Triggered Action): Alarm-Triggered Snapshot And Snapshot Schedule. 	
Remote Configuration Of NVR-Connected IPC: Human Body Detection	Allows User To Enable/ Disable Human Body Detection, Draw Detection Area, Set Detection Sensitivity, Detection Time, Alarm Schedule.	
Remote Configuration Of NVR-Connected IPC: Intrusion Detection	Allows User To Draw Detection Area, Set Detection Sensitivity (High/ Medium/ Low), Time Threshold, Snapshot Object (Type), And Alarm Schedule.	
Remote Configuration Of NVR-Connected IPC: Cross Line Detection	Allows User To Draw Detection Area, Set Detection Sensitivity (High/ Medium/ Low), Snapshot Object (Type), And Alarm Schedule.	
Remote Configuration Of NVR-Connected IPC: Enter Area	Allows User To Draw Detection Area, Set Detection Sensitivity (High/ Medium/ Low), Snapshot Object (Type), And Alarm Schedule.	
Remote Configuration Of NVR-Connected IPC: Leave Area	Allows User To Draw Detection Area, Set Detection Sensitivity (High/ Medium/ Low), Snapshot Object (Type), And Alarm Schedule.	
Remote Configuration Of NVR-Connected IPC: Disarming	Allows User To Disable Disarming Or Set One-Time Disarming (User Can Set A Disarming Time).	
Remote Configuration Of NVR-Connected IPC: Customize Alarm Sound	 (1) Allows User To Add Alarm Sound (By Text-To-Speech Or Recording Alarm Sound, Male Or Female Voice). (2) Allows User To Name An Alarm Sound, Play, Delete An Alarm Sound. (3) Allows User To Configure Alarm Sounds In Batches For NVR-Connected Cameras. 	
Remote Configuration Of NVR-Connected IPC: Storage Configuration	Allows User To Configure A Recording Schedule, Select Recording Type (All Or Motion Detection) And Time (Monday To Sunday).	
Remote Configuration Of IPC		
Notification Alert	Allows User To Enable/ Disable Alarm Messages.	



DATASHEET

GIIV		
	(1) Allows User To Configure Time And Time Zone And Sync The Settings To The Device.	
Time Configuration	Overseas Servers Support DST Configuration.	
	(2) Syncs Time Of Mobile Phone To The Device (Not Including DST).	
Image Configuration	Smart Illumination (IR, White Light, Smart Dual-Light).	
Video Configuration	Allows User To Configure Compression Format For The Main And Sub Streams.	
Audio Configuration	Allows User To Configure Audio Input Volume, Audio Output Volume, And Alarm Output Volume.	
OSD Configuration	Allows User To Configure Time Format And Position.	
PTZ Configuration	Supports PTZ Rectification (Auto/ Manual).	
W (* D) (*	Allows User To Enable/ Disable Motion Detection, Draw Detection Area, Set Detection Time	
Motion Detection	(Cross-Day Allowed), And Detection Sensitivity.	
Human Badu Datastian	Allows User To Enable/ Disable Human Body Detection, Draw Detection Area, Set Detection	
Human Body Detection	Sensitivity, Detection Time, Alarm Schedule.	
Audio Detection	Allows User To Enable/ Disable Audio Detection And Set Detection Sensitivity.	
Internal or Data ation	Allows User To Draw Detection Area, Set Detection Sensitivity (High/ Medium/ Low), Time	
Intrusion Detection	Threshold, Snapshot Object (Type), And Alarm Schedule.	
Cross Line Detection	Allows User To Draw Detection Area, Set Detection Sensitivity (High/ Medium/ Low), Snapshot	
Cross Line Detection	Object (Type), And Alarm Schedule.	
Entor Area	Allows User To Draw Detection Area, Set Detection Sensitivity (High/ Medium/ Low), Snapshot	
Enter Area	Object (Type), And Alarm Schedule.	
Ι οργο Ακορ	Allows User To Draw Detection Area, Set Detection Sensitivity (High/ Medium/ Low), Snapshot	
Leave Area	Object (Type), And Alarm Schedule.	
Auto Track	Allows User To Enable/ Disable Auto Track, Set Detection Time (Cross-Day Allowed), Continuous	
Auto Track	Track, And Max Tracking Time.	
Disarming	Allows User To Disable Disarming Or Set One-Time Disarming (User Can Set A Disarming Time).	
	(1) Allows User To Add Alarm Sound (By Text-To-Speech Or Recording Alarm Sound, Male Or	
Customize Alarm Sound	Female Voice).	
	(2) Allows User To Name An Alarm Sound, Play, Delete An Alarm Sound.	
	Supports SD Card Configuration, SD Card Status Display (Faulty, Unformatted, Normal, No	
Storage Configuration	Card); In Normal SD Card Status, Supports Overwrite/ Storage Status/ Recording Schedule/	
	Video Quality/ Format (Recording Schedule Needs IPC Support).	
Export Diagnostic Info		
Export Diagnostic Info	Allows User To Export Diagnostic Info Of NVR, NVR-Connected IPC, And IPC.	
Test Speed		
Took Chood	Allows User To Test Speed For Cloud IPC And NVR. This Function Is Not Available To Shared	
Test Speed	Devices.	
Import Faces		
Import Faces	Support.	
	Import Faces: Import Face Images Captured In The App Or Import Face Images In The Album To	
	An Existing Face Library On The Device.	
Import Plates		
	Support.	
Import Plates	Import Plates: Enroll Plates Manually In The App, Or Import An Existing Plate Library On The	
	Device.	





Live View	
	(1) Allows User To Share A Device To Multiple Users, And These Users Can View Live Video From
	The Device Simultaneously.
Multiple Viewers	(2) Allows Multiple Users To Log In To One Account From Different Clients And View Live Video
	Simultaneously.
	Support (iOS Only).
Live Preview	Supports One Tap To Start Previewing The Live Video Of All The Cameras Under An NVR Or A
	Shared VMS, Allows User To Pause/ Resume, And Switch Between Large And Small Images.
	1/4/6/9/12/16 Windows.
Live View Window Layout	6- And 12-Window Layouts Are Available Only When Screen Aspect Ratio Is Greater Than 1.9.
	Set Window Layout, Swipe To Switch Screens, Swipe To Switch Cameras, Play Control,
	Snapshot (Screenshot), Local Recording, Digital Zoom, Switch Video Quality (HD/SD/Smooth),
Live View: Play Operations	Enable/ Disable Speaker, Two-Way Audio, PTZ Control (Direction/ Focus/ Zoom/ Preset/ Patrol),
	Image Settings, Quick Switch To Playback, Multi-Window Playback, Maximize Window.
	Switch To HD/ SD/ Smooth Mode Automatically According To Wi-Fi Or Cellular Data Network,
Auto-Adjust Video Quality	Window Layout, Etc.
	(1) Supports Two-Way Audio With Cloud IPC And NVR-Connected IPC. Not Support Two-Way
	Audio With NVR. Two-Way Audio And Video-Associated Audio Are Mutually Exclusive. Only
Two-Way Audio	One-Channel Of Two-Way Audio Is Allowed.
	(2) Allows User To Adjust The Microphone'S Input Volume In Two-Way Audio.
	Support.
CDN	Only Applicable To Domestic Devices And Overseas Doorbells.
	Support.
Video Scrambling	This Feature Requires Device Support.
	Supports Brightness, Saturation, Contrast, Sharpness, 2D Noise Reduction, 3D Noise Reduction,
Image Settings	Image Rotation. Allows User To Restore Image Settings.
Playback	
	Support.
SD Card Recording Playback	Requires User To Switch Device Access Protocol To SDK3.0.
Cloud Recording Playback	Support.
Max Playback Channels	4
Asynchronous Playback	Not Support.
Synchronous Playback	Support.
Calendar Dots Indicating Search	Support.
Results	Only Available To NVR Accessed Via SDK3.
VCA Playback	Supports (Motion Detection, VCA, Alarm, Normal). Available To NVR Only.
Play Operations	Play Control, Snapshot, Local Recording, Digital Zoom, Switch Video Quality (Clear Or Smooth),
	Speaker, Delete Playback, Swap Window By Dragging Image, One Tap To Switch To Live View,
	Adjustable Playback Speed, Split Search, Maximize Window, Close All Playback.
Playback Speed	1/4x, 1/2x, 1, 2x, 4x
Adjustable Video Quality	Supports Smooth And Clear. 1/4x And 1/2x Are Not Available To IPC.
	Progress Bar Search: Drag The Bar Left Or Right (Supports Scale Display By 5/ 10/ 30/ 60
Progress Bar Search	Minutes). iOS Supports Zoom By Clicking Buttons And Gestures; Android Supports Zoom By
-	Gestures.
	1

unv		DATASHEET
	Splits Video In A Window Into 4 Or 9 Segments And Displays In 4 Or 9 Windows.	
Split Search	Allows User To Set The Start And End Time Of A Recording To Be Split (Max 24 Hours Long);	
	Further Split, The Minimum Segment Length Is 1 Minute.	
Corridor Mode In Full Screen		
Corridor Mode In Full Screen	Support.	
Snapshot Mode		
Snapshot Mode	One Snapshot At A Time.	
PTZ Rotation Speed		
PTZ Rotation Speed	1 ~ 9 Levels Adjustable (Default: 6).	
Data Usage		
Data Usage	Supports Cellular/ Wi-Fi Data Usage Statistics.	
Push Notification Settings		
D. I. N. J. C. J.	Support (Android Only).	
Push Notification Settings Supports System Message Settings And Push Notification Set		(On/ Off).
Auto Pause Video		
A. t. D Vid	When Enabled, The App Automatically Pauses Video If There'S No L	Jser Action For A Certain
Auto Pause Video	Period Of Time.	
Auto Discover New Devices		
	When Enabled, The App Automatically Discovers NVRs On The LAN That Carry A Register Code	
Auto Discover New Devices	And Are Not Bound To A Cloud Account. When Such Devices Are Discovered, A Pop-Up Window	
	Appears Indicating New Device Discovered.	
Auto Check Device Version For Cloud	d Upgrade	
Auto Check Device Version For Cloud Upgrade	This Feature Is Enabled By Default.	
Wi-Fi Configuration Tool		
Wi Fi Confirmation Tool	After The Mobile Phone Is Connected To The NVR'S Wi-Fi Network,	The App Syncs Wi-Fi Settings
Wi-Fi Configuration Tool	To The IPC In The Kit So As To Automatically Add The IPC To The NV	/R.
Display In Accordance With Device'S Time Zone		
Display In Accordance With	When Enabled, Alarm Time And Playback Time Will Be Displayed According To The Device'S	
Device'S Time Zone	Time Zone.	
Filter Offline Cameras In Live View		
Elli offi	Allows User To Enable/ Disable Offline Camera Filter. When Enabled	d, Offline Cameras Will Not
Filter Offline Cameras In Live View	Be Displayed On The Live View Screen.	
Alarm Types		

unv	DATASHEET
Alarm Types	Motion Detection Alarm, SD Card Removal Alarm, Call Alarm (Doorbell), Device Online (Doorbell) Device Offline (Doorbell), No Mask Alarm, Abnormal Temperature Alarm, Intrusion Detection Alarm, Tampering Detection Alarm, Tampering Detection Alarm Cleared, Crowd Density Alarm, Elevator Entrance Detection Alarm, Ultra Motion Detection Alarm, Smart Intrusion Prevention Alarm. Note: Only Common Alarm Types Are Listed. For Detailed Information, Please Refer To UNV-Link App Alarm Types (Cloud Storage/ Non-Cloud Storage). (1) Alarm Types Include Two Types: Cloud Storage Alarms And Common Alarms. (Certain Alarm Types Support Alarm Snapshot) (2) SD Card Removal Alarm, Doorbell Call Alarm, Device Online/ Offline Alarm Are Available To Doorbells Only.
Alarm List	
Alarm List	Display The Number Of Unread Alarms: Alarm (xx) xx Means The Number Of Unread Alarms New Message Alert (You Have A New Message, Please Click To Refresh); Latest Update Time. Notification Content: Including Alarm Time, Alarm Type, Device Name And Channel Name. View Alarm Notification: Orange Means Unread, Gray Means Read, Filter Display (By Device/Channel, By Alarm Type, By Time)
Alarm Push	
Alarm Push	Conditions For Push: (1) The Device Is A Cloud Device (Cloud IPC/ NVR/ VMS) Or A Device That Is Added Without Signup. (2) Alarm Notification Is Enabled In The App. (3) System Notification Is Enabled In The Mobile Phone. Remarks: (1) Cloud Storage Devices That Are Added Without Registration Cannot Receive Cloud Storage Alarm Notifications (Note: When An Alarm Exists For Both Regular And Cloud Storage Alarms, The Cloud Storage Alarm Will Take Precedence).
View Alarm Recording	
View Alarm Recording	Support. IPC: User Needs To Switch Access Protocol To SDK3.0. NVR: Both SDK2.0 And SDK3.0 Are OK.
View Alarm Live Video	
View Alarm Live Video	Support.
View Alarm Snapshot	
View Alarm Snapshot	Support. Requires Alarm Type Support.
Cloud Storage Of Alarm Image	
Cloud Storage Of Alarm Image	Support (Only Within China). Get Alarms Directly From The Cloud Without The Need For The Device To Be Online.
View Files	
View Files	(1) View Local Images (JPG) And Videos (MP4). (2) Play (Start/ Pause) Local Videos.
Share And Export	

unv		DATASHEET
	(1) Share Images Via Email, SMS, Etc.	
Share And Export	Share Videos Via Email.	
	(2) Export Images And Videos To The Mobile Phone.	
Delete		
Delete	Delete Images And Videos.	
Logout And Account Cancellation		
Allows User To Sign Up For A Cloud Account With Mobile Phone Number/Email		mber/Email Address.
Cignun	China: Signup With Mobile Phone Number.	
Signup	Overseas: Signup With Email Address (Some Countries/ Regions Als	so Support Signup With
	Mobile Phone Number).	
Account Cancellation	Allows User To Cancel Account.	
Login And Logout		
	Allows User To Log In With Mobile Phone Number/ Email Address A	nd Password.
Login	Support Saving Password.	
Logout	Allows User To Log Out Of The Account.	
Edit Account Info		
Change Username	Allows User To Change Username.	
Change Password	Allows User To Change Password After Entering The Old Password.	
Change Mobile Phone Number/	Allows User To Change Mobile Phone Number Or Email Address After Entering The Verification	
Email Address	Code.	
Others		
	Ad Page, Launch Page, New Version Check, Tutorial Video, User Ex	perience Program, Privacy
	Policy, User Help, Device Documents, Customer Service, Ezcloud Announcement, Multiple	
	Languages.	
	Ad Page: Displays Only When The Mobile Phone System Language	Is Simplified Chinese.
Oth	Language: Switches According To The Mobile Phone System Language.	
Others	Customer Service: Show Customer Service Hotline, QQ And Wechat Public Account, And	
	Technical Support Telephone Number In Simplified Chinese; Show	Technical Support Email
	Address In Other Languages.	
	Personal Information: Show Server Address And Region In Non-Sin	nplified Chinese; Hide In
	Simplified Chinese.	
OS		
OS	Supports iOS (10.0 Or Later) And Android (7.0 Or Later).	
Compatibility		
Compatibility	Compatible With iOS And Android Phones.	



Zhejiang Uniview Technologies Co., Ltd.

No. 369, Xietong Road, Xixing Sub-district, Binjiang District, Hangzhou City, 310051, Zhejiang Province, China

Email: overseas business@uniview.com; global support@uniview.com

http://www.uniview.com

©2024-2025 Zhejiang Uniview Technologies Co., Ltd. All rights reserved.

*Product specifications and availability are subject to change without notice.

*Despite our best efforts, technical or typographical errors may exist in this document. Uniview cannot be held responsible for any such errors and reserves the right to change the contents of this document without prior notice.