

# **UNV-Link Pro Mobile App Datasheet**

#### UNV-Link Pro—Android





### Overview

UNV-Link Pro is a professional mobile AIoT app for installers. It provides a range of functions including project management, test and commissioning, remote configuration, O&M management, video viewing, and PTZ control on a mobile phone. UNV-Link Pro supports iOS, Android, and HarmonyOS mobile phones and can be downloaded free of charge from various app stores.

### **Features**

- Project management: efficient management of multiple projects.
- Test and commissioning: complete test and commissioning on a mobile phone.
- Remote O&M: lower labor cost through remote operation and maintenance.
- Secure access: security ensured by multiple protections, including dynamic password, digit/pattern password, and the policy that allows one device to be bound to only one cloud account.
- Stable connection: P2P networking technology with elastic and scalable architecture.

1



# Specifications

| Model                     | Link Pro Android EN   |
|---------------------------|---|
| Signup                    |   |
| Signup                    | Allows User To Sign Up With Email Address Or<br>Overseas Mobile Phone Number.   |
| Login                     |   |
| Login                     | Allows User To Log In With Username, Email Address Or Overseas Mobile Phone Number.                                       |
| Auto-Login                | Supports Remembering Password And Auto-Login.   |
| Forgot Password           | Allows User To Reset Password With Registered Email Address Or Mobile Phone Number.                                       |
| Logout                    |   |
| Logout                    | Allows User To Log Out.   |
| Cancel Account            |   |
| Cancel Account            | Allows User To Cancel Account.  |
| Edit Information          |   |
| Edit Username             | Allows User To Edit Username.   |
| Change Password           | Allows User To Change Login Password.   |
| Registration Info         | Allows User To Change The Registered Email Address Or Mobile Phone Number.  |
| UNVBOX                    |   |
| Go To UNVBOX              | If UNVBOX Is Installed, User Will Be Redirected To The App; Otherwise, User Will Be Redirected To App Store For Download. |
| Connect Box Tutorial      |   |
| Connect Box Tutorial      | Allows User To View Connect Box Tutorial On The Homepage.   |
| Connect To Connect Box    |   |
| Connect To Connect Box    | Allows User To Check Connect Box Connection By Connect Box'S Wi-Fi Name.  |
| Connect Box Device Status |   |
| Voltage                   | Voltage Detection, PoE Detection, 12 V Output Voltage,<br>PoE Output Voltage.   |





| Current                                      | 12 V Output Current, PoE Output Current.   |
|--|--|
| Edit Connect Box                             |  |
| Change Connect Box IP                        | Allows User To Modify Connect Box'S IP Address To The IPC'S Gateway Address (XXX.XXX.XXX.1).   |
| Connect Box: Live View                       |  |
| Quick Preview                                | After Connection, IPCs On The LAN Will Be Discovered<br>Automatically. User Can View Live Video And Adjust<br>Camera Settings.                             |
| Batch Configuration: Network Configuration   |  |
| Network Configuration: Network Configuration | Supports Batch Network Configuration For The Automatically Discovered Devices.   |
| Video Configuration                          |  |
| Device Video Configuration                   | Supports Batch Video Configuration For The Automatically Discovered IPCs.  |
| Channel Video Configuration                  | Supports Batch Video Configuration For IPCs Under The Automatically Discovered NVRs.   |
| Batch Configuration: Cloud Upgrade           |  |
| Cloud Upgrade: Cloud Upgrade                 | Supports Batch Upgrade Of Cloud Devices.   |
| Create Project                               |  |
| Create Project                               | Allows User To Create Projects (Project Name Is Required).   |
| Delete Project                               |  |
| Delete Project                               | Allows User To Delete Projects (Deleting In Batches Is<br>Not Supported; When Deleted, Local And Cloud Devices<br>Under The Project Will Also Be Deleted). |
| Edit Project                                 |  |
| Edit Project                                 | Allows User To Edit Project Name.  |
| Search Project                               |  |
| Search Project                               | Allows User To Search Projects By Project Name (Supports Fuzzy Matching).  |
| Refresh Project Status                       |  |
| Refresh Project Status                       | Allows User To Pull Down The Project List To Refresh The Project Status.   |
| Deliver Project                              |  |





| Deliver Project                       | Allows User To Deliver One Or Multiple Devices At A Time (Delivered Projects Will Still Be Kept; Cannot Deliver The Default Project).  |
|---------------------------------------|--|
| Delivery Records                      | Displays Delivery Records, Including The Device Name<br>And Serial Number.   |
| Deliver By Sharing                    | Allows User To Choose Whether To Assign Permissions To Recipients When Sharing Devices.  |
| Project O and M                       |  |
| Project O and M                       | Service Providers Can Perform O and M Operations To Devices Entrusted By End Users Through The UNV-Link App (Entrusted Devices With A Delivery Record Are Displayed In The Corresponding Project; Entrusted Devices Without A Delivery Record Are Displayed In The Default Project). |
| Device Connection                     |  |
| Supported Device Types                | Uniview IPC (Fisheye, Dual-Channel, Single-Channel)/ NVR.  |
| Add Device                            |  |
| Add Device To Cloud                   | Supports Binding Devices To Cloud Account By Scanning QR Code On Device Or Manually Entering Register Code.  |
| Add Device On The LAN                 | Allows User To Search For And Add Devices On The LAN One By One Or In Batches.   |
| Add Wi-Fi Device                      | Supports Configuring AP Network For Wi-Fi Devices And Binding To Cloud Account.  |
| Batch Add Devices On The LAN To Cloud | Before Delivery, User Can Add Devices On The LAN To<br>Cloud In Batches By Binding Interfaces In Batches.  |
| Imported From Other Projects          | Allows User To Import Devices From Other Projects.   |
| Device Information                    |  |
| Device Name                           | Allows User To Edit Device Name, Which Will Be<br>Synced To Cloud.   |
| Channel Name                          | Allows User To Edit Device Channel Name, Which Will Be Synced To Device Side.  |
| Device Serial Number                  | Displays Device Serial Number (Uneditable).  |
| Device Model                          | Displays Device Model (Uneditable).  |
| Access Protocol                       | Supports SDK3 Protocol Only.   |





| Device Password                       | Allows User To Edit Device Login Password.  |
|---------------------------------------|---|
| Device Time                           | Allows User To Edit Device Time Zone, Time, DST, And Sync Device Time With Mobile Phone Time. |
| Wi-Fi Information                     | Displays Wi-Fi Information Of Wi-Fi Devices, Including Wi-Fi Name And Signal Strength.        |
| Change Channel Add Password           |   |
| Change Channel Add Password           | Allows User To Change Password For Adding A Channel To NVR And View Reason For Failed Login.  |
| Add Channel                           |   |
| Auto Add                              | Add Channels Under NVR Automatically.   |
| Manual Add                            | Search Channels Under NVR And Add Channels Manually.  |
| Import Faces                          |   |
| Import Faces                          | Allows User To Import Face Images To Device Face Libraries.                                   |
| Import Plates                         |   |
| Import Plates                         | Allows User To Import Plate Information To Devices.   |
| Cloud Upgrade                         |   |
| Cloud Upgrade                         | Support Cloud Upgrades To NVRs, IPCs Under NVR, And IPCs.                                     |
| Device Diagnosis                      |   |
| Export Diagnostic Info                | Allows User To Export The Diagnostic Information Of Ipcs, Nvrs, And Ipcs Under Nvr.           |
| Device Diagnosis: Test Device Speed   | Supports Cloud IPC/ NVR Speed Test.   |
| Test Device Speed                     |   |
| Test Device Speed: Test Device Speed  | Supports Cloud IPC/ NVR Speed Test; Displays Network Latency And Upload Speed.                |
| Alarm Output                          |   |
| Alarm Output: Alarm Output            | IPCs Under NVR And IPCs Support Alarm Output (For Both Local And Cloud Devices).              |
| Forgot Device Password                |   |
| Retrieve Password By Scanning QR Code | Supports Retrieving Device Password By Scanning QR Code On Web Page.                          |





| Retrieve Password By Verification Code | Supports Retrieving Device Password By Sending Verification Code To The Bound Mobile Phone Number Or Email Address.                      |
|--|--|
| Device Packet Capture                  |  |
| Device Packet Capture                  | Supports Capturing Packets On The Device Side (Entry: Device List And Remote Config Screen).   |
| Restart Device                         |  |
| Restart Device                         | Restart Device.  |
| Delete Device                          |  |
| Delete Device                          | Delete/ Unbind Device.   |
| Device List                            |  |
| Device Status                          | Displays Device Online/ Offline Status, Total Number Of<br>Devices, 4G Signal Strength, And Number Of Online<br>Devices/ IPCs Under NVR. |
| Search Devices                         | Allows User To Search Devices By Device Name (Supports Fuzzy Matching).  |
| Refresh Device Status                  | Allows User To Pull Down The Device List To Refresh Device Status.   |
| Notification                           |  |
| Receive Alarm Notifications            | Supports Receiving Alarm Notifications With Alarm Snapshots.   |
| Alarm Configuration                    |  |
| Disarming                              | Supports Configuring Disarming For IPCs And NVRs.  |
|  | Allows User To Upload And Record Alarm Sound.  |
| Customize Alarm Sound                  | Supports Editing Alarm Sound Name And Playing And Deleting Alarm Sound.  |
| General Detection                      |  |
|  | Common Motion Detection: Enable/ Disable, Draw<br>Detection Area, Arming, Sensitivity, Alarm Snapshot.                                   |
| Motion Detection                       | Smart Motion Detection: Enable/ Disable, Draw Detection Area, Arming, Sensitivity, Object Snapshot, Alarm Sound, Alarm Light.            |
| Human Body Detection                   | Enable/ Disable, Draw Detection Area, Arming,<br>Sensitivity, Alarm-Triggered Actions.   |
| Audio Detection                        | Enable/ Disable, Sensitivity.  |



| VCA Detection            |   |
|--------------------------|---|
| Intrusion Detection      | Enable/ Disable, Draw Detection Area, Arming,   |
|                          | Sensitivity, Stay Time, Alarm Sound, Alarm Light.   |
| Enter Area Detection     | Enable/ Disable, Draw Detection Area, Arming,<br>Sensitivity, Object Snapshot, Alarm Sound, Alarm Light.                    |
| Leave Area Detection     | Enable/ Disable, Draw Detection Area, Arming,<br>Sensitivity, Object Snapshot, Alarm Sound, Alarm Light.                    |
| Cross Line Detection     | Enable/ Disable, Draw Detection Area, Arming,<br>Sensitivity, Object Snapshot, Alarm Sound, Alarm Light.                    |
| Auto Tracking            | Enable/ Disable, Detection Time, Continuous Track,<br>Maximum Tracking Time.  |
| Network Configuration    |   |
| Network Configuration    | Supports Configuring IP Obtain Mode, IP Address,<br>Subnet Mask, Default Gateway.   |
| Image                    |   |
| Rotate Image             | Supports Rotating Image 180 °.  |
| WDR                      | Enable/ Disable.  |
| Smart Illumination       | Supports White Light, Infrared, Smart Dual-Light, Smart White Light (Varies With Device Capacity).                          |
| Day/ Night Mode          | Auto, Day, Night.   |
| OSD                      | Enable/ Disable; Supports 4 OSD Locations (Upper-Left, Upper-Right, Lower-Left, Lower-Right) And Customizing Text Contents. |
| Video                    |   |
| Video: Video Compression | Supports Choosing Video Compression Format (H.264/ H.265) For Main/ Sub Stream.   |
| Sound and MIC            |   |
| Audio Input              | Enable/ Disable; Allows User To Adjust Audio Input<br>Volume.   |
| Audio Output             | Allows User To Adjust Audio Output Volume.  |
| Alarm Output             | Allows User To Adjust Alarm Output Volume.  |
| PTZ                      |   |
| PTZ Rectification        | Supports Rectifying PTZ Manually Or Automatically.  |
| IPC Storage              |   |





| SD Card Capacity           | Displays SD Card Status And Capacity.  |
|----------------------------|--|
| SD Card Configuration      | Enable/ Disable Overwrite Storage Policy; Allows User<br>To Choose To Record By Schedule Or Event And<br>Formatting SD Card. |
| NVR Storage                |  |
| Recording Schedule         | Allows User To Choose To Record By Schedule Or Event.  |
| Overwrite                  | Enable/ Disable Overwrite Storage Policy.  |
| Channel Configuration      | Allows User To Choose Channel For Configuration.   |
| Storage Medium             |  |
| NVR Storage Medium         | Allows User To Format Disks.   |
| Wi-Fi                      |  |
| Wi-Fi: Wi-Fi Configuration | Supports Connecting Wi-Fi Device To Wi-Fi Network And Switching Device'S Wi-Fi.  |
| More                       |  |
| EZCloud                    | Enable/ Disable EZCloud (For Local Devices Only).  |
| Indicator                  | Allows User To Turn On/ Off Device'S Indicator.  |
| Restore Defaults           | Supports Restoring Device To Defaults Or Factory Defaults.   |
| Advanced                   |  |
| Advanced                   | Provides A Portal To Device'S Web Interface For More Device Configurations.  |
| Device Location            |  |
| Sync Mobile Phone Location | Supports Syncing Mobile Phone'S GPS Information To IPC.  |
| Live View                  |  |
| Video Compression          | Supports U-Code, H.264, H.265 Video Compression Standard.  |
| Play Live View             | Supports Single Window And Swiping To Switch Live View Windows.  |
| Video Scrambling           | Supports Scrambling Videos (For Wi-Fi Devices Only).   |
| Two-Way Audio              | Supports Starting And Ending Two-Way Audio; Only<br>One Channel Of Two-Way Audio Is Allowed At A Time.                       |
| Speaker                    | Supports Playing Audio With Live Video.  |





| Loading Progress           | Displays The Percentage Of Video Loading Progress.  |
|----------------------------|---|
| Streaming Info             | Displays Current Stream'S Bandwidth, Real-Time<br>Network Occupation (KB/s), And Packet Loss Rate.  |
| Network Monitoring         | Supports Prompting User When The Network Is Poor Or Streaming Is Congested.   |
| Image Parameters           | Supports Configuration Of Image Rotation, Brightness,<br>Saturation, Contrast, Sharpness, 2D NR, 3D NR, WDR,<br>Smart Illumination, Day/ Night Mode, And OSD. |
| Live View: Video Quality   | Supports High, Medium, Fluent Video Quality (Vary With Device Model).   |
| Multi-Window Preview       | One-Tap To Preview All Live Videos Of Online<br>Channels Under The Account.   |
| Playback                   |   |
| SD Card Recoding           | Supports Playing Recordings Stored In SD Card.  |
| Specify Playback           | Allows User To Specify Playback Date And Time Point.  |
| Layout                     | Supports Single Window.   |
| Calendar Search            | Dates With Recordings Are Marked On The Calendar.   |
| Recording Type             | Supports 4 Recording Categories: Motion Detection, VCA, Alarm, Normal.  |
| Video Quality              | Supports High And Fluent Video Quality.   |
| Play Control               |   |
| Digital Zoom               | Supports Dragging To Zoom In.   |
| Local Snapshot             | Supports JPEG Images.   |
| Local Recording            | Allows User To Play, Save, And Delete Recordings (At Least 3 Seconds).  |
| Landscape Mode             | Supports Full-Screen Display In Landscape Orientation.  |
| Corridor Mode              | Supports Full-Screen Display In Corridor Mode (By Rotating Image 90 °).   |
| Simultaneous Streaming     | Supports Streaming Multiple Channels Simultaneously (For Live View).  |
| PTZ Control                |   |
| Control Rotation Direction | Supports 4 Rotation Directions (Up, Down, Left, Right).   |
| Control Lens               | Focus And Zoom.   |





| Preset                       | Allows User To Add, Display, Delete, And Call Presets;<br>Up To 12 Presets Are Allowed.   |
|------------------------------|---|
| Patrol                       | Enable/ Disable; Supports Configuring Patrol Time And Preset Pause Time.  |
| Alarm Display                |   |
| Alarm Snapshot               | Supports Reporting Alarm With Snapshot And Displaying<br>Alarm Snapshot In Alarm Records (Only For Applicable<br>Types Of Alarm). |
| Alarm Recording              | Supports Viewing Alarm Recording At The Time Of Alarm Event.  |
| Today'S Alarm                | Up To 200 Alarms Can Be Searched In Today'S Alarm.  |
| Notification Status          | Supports Two Status: Unread And Read.   |
| Use Device Time Zone         |   |
| Use Device Time Zone         | Enabled By Default; Alarms And Recordings Use The Device'S Time.  |
| Temperature Unit             |   |
| Temperature Unit             | Supports Celsius (°C) And Fahrenheit (°F).  |
| Password Protection          |   |
| Password Protection          | Supports Setting Whether A Password Is Required To<br>Open The App, Including No Password, Pin, And Pattern.                      |
| Data Usage                   |   |
| Cellular Data Usage          | Cellular Data Usage.  |
| Wi-Fi Data Usage             | Wi-Fi Data Usage.   |
| Device Wi-Fi Configuration   |   |
| Wi-Fi Configuration          | Supports Wi-Fi Configuration (For Wi-Fi Devices Only).  |
| Device Hotspot Configuration |   |
| Hotspot Configuration        | Allows User To Edit Device Hotspot Information.   |
| Auto-Pause Video             |   |
| Auto-Pause Video             | When Enabled, Video Will Pause Automatically If No<br>Operation Is Performed Within 10 Minutes.                                   |
| Optimize Video Fluency       |   |
| Optimize Video Fluency       | When Enabled, Video Is Smoother But May Be Delayed.   |
| User Manual                  |   |



| User Manual                   | Allows User To View User Manual.  |
|-------------------------------|---|
| Device Manual                 |   |
| Device Manual                 | Allows User To View Device Manual.  |
| Tutorial                      |   |
| Tutorial                      | Allows User To View App Tutorial Video On Device<br>And Me Screen.                              |
| Customer Service              |   |
| Customer Service              | Allows User To View Customer Service Email.   |
| About                         |   |
| User Experience Program       | Sends Logs.   |
| Privacy Policy                | Allows User To View Privacy Policy.   |
| Service Agreement             | Allows User To View Service Agreement.  |
| Languages                     | Automatically Switches The Language With The Mobile Phone System; Supports Chinese And English. |
| Open Source Software Licenses | Open Source Software Licenses.  |
| os                            |   |
| iPhone/ iPad                  | iOS 12.0 Or Later.  |
| Android                       | Android 7.0 Or Later.   |
| Harmony                       | HarmonyOS 2.0, 3.0, And 4.0.  |

### Accessories

GCB01-B7

**UNV-Link Pro Connect Box** 



#### Zhejiang Uniview Technologies Co., Ltd.

No. 369, Xietong Road, Xixing Sub-district, Binjiang District, Hangzhou City, 310051, Zhejiang Province, China (Zhejiang) Pilot Free Trade Zone, China

Email: overse as business @uniview.com; global support @uniview.com

http://www.uniview.com



©2024-2025 Zhejiang Uniview Technologies Co., Ltd. All rights reserved.

<sup>\*</sup>Product specifications and availability are subject to change without notice.

<sup>\*</sup>Despite our best efforts, technical or typographical errors may exist in this document. Uniview cannot be held responsible for any such errors and reserves the right to change the contents of this document without prior notice.