

Intelligent Edge Small Station (Algorithm Warehouse) User Manual

Manual Version: V1.06

About This Manual

Thank you for your purchase. If you have any questions, please do not hesitate to contact your dealer.

Copyright Statement

©2024-2025 Zhejiang Uniview Technologies Co., Ltd. All rights reserved.




No part of this manual may be copied, reproduced, translated or distributed in any form or by any means without prior consent in writing from Zhejiang Uniview Technologies Co., Ltd (referred to as Uniview or us hereafter). The product described in this manual may contain proprietary software owned by Uniview and its possible licensors. Unless permitted by Uniview and its licensors, no one is allowed to copy, distribute, modify, abstract, decompile, disassemble, decrypt, reverse engineer, rent, transfer, or sublicense the software in any form or by any means.

Usage Instructions

- Uniview reserves the right to change any information in this manual without any prior notice or indication. Due to such reasons as product version upgrade or regulatory requirement of relevant regions, this manual will be periodically updated.
- The product described in this manual is provided on an "as is" basis. Unless required by applicable law, this manual is only for informational purpose, and all statements, information, and recommendations in this manual are presented without warranty of any kind, expressed or implied, including, but not limited to, merchantability, satisfaction with quality, fitness for a particular purpose, and noninfringement.
- Users must assume total responsibility and all risks for connecting the product to the Internet, including, but not limited to, network attack, hacking, and virus. Uniview strongly recommends that users take all necessary measures to enhance the protection of network, device, data and personal information. Uniview disclaims any liability related thereto but will readily provide necessary security related support.

Document Conventions

- The graphics, tables or photos in this manual are only for illustrative purpose. The actual product may be different.
- The mouse operations described in this manual are right-handed operations.
- This manual is a guide for multiple product models instead of for a specific product, and certain contents in this manual may not apply to all products.
- Due to uncertainties such as physical environment, discrepancy may exist between the actual values and reference values provided in this manual. In case of any conflicts or disputes, please refer to our final interpretation.
- Please follow the instructions in this manual when you use the product. Using the product under professional guidance is recommended.
- The symbols in the following table may be found in this manual. Carefully follow the instructions indicated by the symbols to avoid hazardous situations and use the product properly.

Symbol	Description
 NOTE!	Indicates useful or supplemental information about the use of product.
 CAUTION!	Indicates a situation which, if not avoided, could result in damage, data loss or malfunction to product.
 WARNING!	Indicates a hazardous situation which, if not avoided, could result in bodily injury or death.

Contents

About This Manual	i
1 Usage Instructions.....	1
2 User Login	1
2.1 Login	1
2.2 Local Warehouse Algorithm.....	2
2.3 Reset Password.....	2
2.4 Change Password.....	2
2.5 Logout	3
2.6 Change Theme.....	3
2.7 Change Language.....	3
3 Channel Management	3
4 Smart Configuration.....	4
4.1 Area Configuration	5
4.2 Arming Schedule.....	9
4.3 Linkage Actions	10
5 Algorithm Capability Configuration	10
5.1 Intelligent Parameters	10
5.2 Local Warehouse Algorithm.....	11
5.3 AlertFree	11
6 Data Dashboard.....	12
7 Library Configuration.....	12
7.1 Work Clothes Library	12
7.1.1 Work Clothes Library Management	13
7.1.2 Work Clothes Management	13
7.2 Person Library.....	14
7.2.1 Person Library Management	15
7.2.2 Person Management	15
8 Analysis & Statistics.....	17
8.1 Traffic Event	17
8.2 People Counting	18

9 Data Search	19
9.1 Data Search	19
9.1.1 Behavioral Data	19
9.1.2 Face Data	20
9.2 Target Search	21
10 Platform Configuration	22
10.1 Alarm Center	22
10.1.1 Platform Configuration	22
10.1.2 Upload Time Interval Config	23
10.1.3 Camera Audio Config	24
10.2 Video Convergence Platform	24
10.3 EZCloud	25
11 Auto-Learning	26
11.1 Sample Library	26
11.2 Smart Configuration	26
12 System Configuration	26
12.1 User Configuration	26
12.2 Time Configuration	27
12.3 Security	28
12.3.1 SSH	28
12.3.2 IP Address Filtering	28
12.3.3 HTTPS	28
12.4 Maintenance	30
12.5 Version Information	30
12.6 Personalization	30
12.6.1 Logo and Name	30
12.6.2 Upload Audio	31
12.6.3 PC Alarm Settings	31
12.7 Network Information	32
12.7.1 Packet Capture	32
12.7.2 Network Resource Statistics	32
12.7.3 Network Test	32
12.8 Online User	33

12.9 Operation Logs	33
13 Network Configuration	33
13.1 TCP/IP	33
13.2 Port	34
13.3 Custom Route.....	34
14 Face Monitoring Task Search.....	34

1 Usage Instructions

- The supported functions may vary with device models. Please refer to the actual interface.
- Please make sure that the server hosting the system and the client computer are connected via network. For optimal performance, it is recommended to use Google Chrome.
- The system has dual network interfaces. By default, the IP address of interface **1** is **192.168.1.30** and interface **2** is **192.168.2.30**.
- The device supports local interface operation. If required, connect a monitor to the HDMI 1 port, and a keyboard and mouse to the USB ports.
- When [HTTPS](#) is enabled, the local interface is unavailable.

2 User Login



Hello!
Welcome

Username :

Password :

[Login](#)

[Forgot Password?](#)



NOTE!

- To use the local interface without an external keyboard, you can enable the on-screen keyboard in the upper-right corner of the login screen, then enter characters using it.
- The external keyboard supports only letter input, while the on-screen keyboard supports multi-language input.

2.1 Login

Open the web browser, enter the [http://smart box IP address](#) in the address bar, and then press **Enter** to open the **Login** page. Enter the username and password (default: admin/123456), and then click **Login**.

For the first login, follow the on-screen instructions to complete the information.

2.2 Local Warehouse Algorithm

For the first-time login, you need to select the algorithm(s) that you wish to use.

You can later adjust the settings in **Algorithm Capability Config > Local Warehouse Algorithm**.

See [Local Warehouse Algorithm](#).

Please select scenario(s) or algorithm(s) as needed

Common Safe Production Safe Community Safe School Smart Hospital Construction Site
Bright Kitchen Rural Road Expressway Service ... Highway Gas Station
Clear All


Category	Algorithm Function(20/20)
<input type="checkbox"/> Behavior	<input checked="" type="checkbox"/> Sleep On Duty Detection <input checked="" type="checkbox"/> Absence Detection <input checked="" type="checkbox"/> Smoking Detection <input checked="" type="checkbox"/> Calling Detection <input checked="" type="checkbox"/> Using Mobile Phone Detection <input checked="" type="checkbox"/> Fall Detection <input type="checkbox"/> Climbing Detection <input type="checkbox"/> Long Stay Detection <input type="checkbox"/> Fight Detection <input type="checkbox"/> People Gathering <input type="checkbox"/> Quick Moving Detection <input type="checkbox"/> Inadequate Worker <input type="checkbox"/> Knife/Stick in Hand Detection
<input type="checkbox"/> Vehicle	<input type="checkbox"/> Illegally Parked Motor Vehicle <input type="checkbox"/> Unwashed Vehicle Detection <input type="checkbox"/> Illegally Parked Non-Motor Vehicle <input type="checkbox"/> Campus Vehicle Overspeed Detection <input type="checkbox"/> Forklift Overspeed Detection <input type="checkbox"/> Forklift Detection <input type="checkbox"/> Construction Vehicle Detection <input type="checkbox"/> Vehicle Entering/Exiting Service/Charging Station <input type="checkbox"/> Campus Entrance/Exit LPC <input type="checkbox"/> Campus Vehicle Congestion Detection
<input type="checkbox"/> Expressway Event	<input type="checkbox"/> Litter Detection <input type="checkbox"/> Traffic Accident Detection <input type="checkbox"/> Vehicle Underspeed Detection <input type="checkbox"/> Vehicle Driving Away Detection <input type="checkbox"/> Fog Detection <input type="checkbox"/> Abnormal Parking Detection <input type="checkbox"/> Non-Motor Vehicle Intrusion Detection <input type="checkbox"/> Emergency Lane Occupation Detection <input type="checkbox"/> Pedestrian Intrusion Detection <input type="checkbox"/> Vehicle Wrong-Way Driving Detection <input type="checkbox"/> Road Snow Accumulation Detection <input type="checkbox"/> Vehicle Congestion Detection <input type="checkbox"/> Road Construction Detection <input type="checkbox"/> Traffic Parameters
<input type="checkbox"/> Other Functions	<input type="checkbox"/> Gas Cylinder Detection

Confirm

2.3 Reset Password

Click **Forgot Password**. Scan the QR code to obtain a security code, then enter the code and set a new password for admin.

Reset Password ×



Send security code to: 1****@.com

security code

Please scan the QR code to obtain the security code (for admin only):

- Scan with your app

Next Cancel

2.4 Change Password

To change the login password, click the username in the top right corner, click **Change Password**, and then follow the on-screen instructions to set the new password.

Change Password
×

* Old password :

* New password :

Password Strength :

* Confirm new password :

Confirm
Cancel

2.5 Logout

Click the username in the top right corner, and then click **Logout**.

2.6 Change Theme

Click **Change Theme** in the top right corner to personalize the theme.

2.7 Change Language

Click **English** > in the upper-right corner to switch the display language of the device interface.

3 Channel Management

Channel management includes:

- Channel operations: add, edit, delete, search channels.
- Task configuration: choose tasks, draw detection areas.

Key Operations

- Add manually: Click **Add**, and then configure the parameters.
- Auto search: Click **Auto Search** to search devices on the same LAN as the smart box, and then configure the parameters.
- Video Convergence Platform Import: Click 📄 Video Convergence Platform Import to search for cameras within the platform, and then select camera(s) to add.





 
 
NOTE!

Before using the Video Convergence Platform Import function, ensure that [Video Convergence Platform](#) is enabled and properly configured.

Protocol	Description
Onvif Protocol	Enter the channel name, IP, username, and password, and then choose a stream type.

Protocol	Description
RTSP Protocol	<p>It is recommended to choose RTSP when:</p> <ul style="list-style-type: none"> The smart box cannot pull streams from the channel directly, but can pull streams via an NVR. In this case, obtain the RTSP URL from the NVR. The smart box cannot connect the camera via Onvif. In this case, enter the RTSP URL by referring to the examples below, and then replace parameters ①②③ accordingly; other URLs remain unchanged. <p style="text-align: center;"> ① ② ③ </p> <p>Template > Authentication mode: rtsp://admin:123@204.204.70.67/media/video1 Non-authentication mode: rtsp://192.168.1.10:554//Streaming/1 ③</p> <p style="text-align: right;"> ① Username of the channel ② Password of the channel ③ IP address of the channel </p> <p>Refer to the following examples for common RTSP stream formats in authentication mode:</p> <pre>rtsp://admin:admin@192.168.1.15:554/id=0 rtsp://admin:123456@192.168.1.15:554/1/0 rtsp://admin:123456@192.168.1.15:554/stream1 rtsp://admin:123456@192.168.1.15:8554/profile0 rtsp://admin:123456@192.168.1.15:8554/profile1 rtsp://admin:123456@192.168.1.15:554/live0.264 rtsp://admin:123456@192.168.1.15:554/media/video1 rtsp://admin:123456@192.168.1.15:554/unicast/c1/s0/live rtsp://admin:123456@192.168.1.15:554/LiveMedia/ch1/Media1 rtsp://admin:123456@192.168.1.15:554/Streaming/Channels/101 rtsp://admin:123456@192.168.1.15:554/cam/realmonitor?channel=1&subtype=0</pre>

Other Operations

Operation	Description
	Enable intelligent analysis.
Analysis configuration	Click Analysis Config , click  and choose the intelligent analysis service. See Smart Configuration for details.
Edit	Click Edit to edit the channel information. Caution: Be cautious when replacing the channel settings with settings of other channels; it may affect data analysis and retrieval.
Details	Click Details to view the detailed channel information.
Delete	<ul style="list-style-type: none"> Delete one by one: Click Delete. Delete in batches: Select the channels to be deleted and click .
Refresh	Click  to refresh the channel list.

4 Smart Configuration

Configure intelligent analysis for channels.



NOTE!

- If the configured analysis tasks exceed the total computing power of the Smart Box, analysis accuracy will be affected. Please pay attention to the remaining computer power during configuration.
- Face recognition cannot be enabled simultaneously with other functions. There are no such limitations for other functions.
- Traffic event service and behavior analysis service cannot be enabled simultaneously.

Operation	Description
Select Channel	Choose the channel to configure.
Save Alarm Video	Set the alarm video length. After being enabled, you can view alarm videos in Data Search .
Face Recognition/ Behavior & Person Identification (displayed based on service type)	<p>When enabled, you can configure the following parameters:</p> <ul style="list-style-type: none"> • Person Library: Select one or more person libraries. Detected targets will be compared with persons in the selected libraries. Results can be viewed on the Data Search page. • Alarm Threshold: Set the match threshold to trigger an alarm. • Alarm Type: Choose Match Alarm, Not Match Alarm, or All. <p>Enable <input checked="" type="checkbox"/></p> <p>Person Library: <input type="text" value="Default List x"/></p> <p>Alarm Threshold: <input type="text" value="80"/></p> <p>Alarm Type: <input type="text" value="All"/></p>

4.1 Area Configuration


← D2(12121) Save Alarm Video: Close

+ Tripwire People Counting x

Rule Config Arming Schedule Linkage Actions

Draw Line Clear All Rules How to draw

2018-09-26 18:09:22

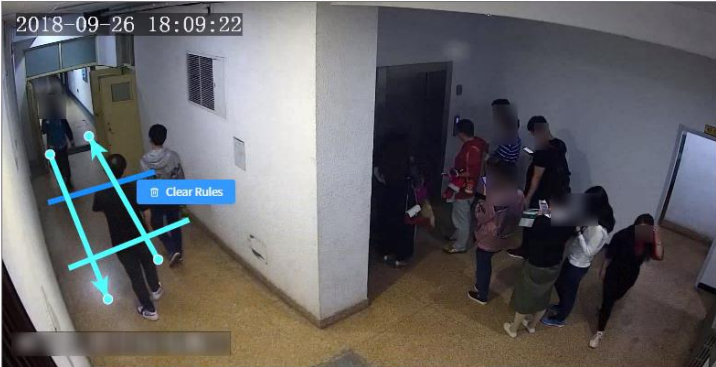

Rule Configuration

Auto-Clear Counting Data:

Save

1. Draw the detection rule.
 - Use the default rule: By default, the detection area covers the entire image.

- Customize rules: Click **Clear Rules**, and then draw rules as needed.
Click to start drawing, right-click to finish.
Draw a tripwire: Specify two points to set the tripwire, click again to set the detection direction.
Draw an area: Specify 3 to 6 points to set the detection area.




NOTE!

Some algorithms support multiple detection areas.

2. Configure the parameters as needed.

Item	Description	Algorithm
Sensitivity	Set the detection sensitivity. Higher sensitivity triggers alarms more easily, but may also increase false alarms.	General Configuration (required for most algorithms)
Trigger Time	An alarm is triggered when the duration of the behavior reaches the threshold. Range: 1-1800s	
Alarm Interval	Though behavior detections are continuous, alarms will be reported at set time interval.	
Face Capture Mode	<ul style="list-style-type: none"> • Quality Priority: Reports the best-quality face snapshot from when the face enters the image until it leaves. • Speed Priority: Reports the best-quality face snapshot from when the face enters the image until a predefined quick reporting time is reached. • Periodic Selection: Reports a face snapshot at specified intervals from when the face enters the image. • Quick Report: Immediately reports a face snapshot when the face enters the image. If a higher-quality snapshot is captured later, it will also be reported. 	Face Recognition
Min. Face Filtering Size Width/Height	Faces with the size smaller than the set size will not be detected.	
Face Quality Score	Set the detected face quality score. A higher score imposes stricter quality requirements on captured face photos; only captured images meeting the quality score will trigger an alarm.	
Intrusion Detection Type	Available options: Pedestrian, Non-Motor Vehicle, and Motor Vehicle.	Intrusion Detection
Max./Min. Head & Shoulder Filter Width/Height	Excludes pedestrians with head and shoulder dimensions outside specified limits.	Intrusion Detection, Enter Area, Leave Area, Gun Detection
Max./Min. Non-Motor Vehicle Filter Width/Height	Excludes non-motor vehicles with dimensions outside specified limits.	Intrusion Detection
Max./Min. Motor Vehicle Filter Width/Height	Excludes motor vehicles with dimensions outside specified limits.	Intrusion Detection
Work Clothes Library	See Work Clothes Library Management.	No Work Clothes Detection, No Chef Uniform Detection, Illegal Fueling Detection
Background Refresh Interval	The background refresh interval must be greater than the trigger time configured for Lost Items; otherwise, alarm will not be triggered.	Object Removed

Item	Description	Algorithm
Person Number Limit	<ul style="list-style-type: none"> Absence Detection, Inadequate Worker: An alarm will be triggered if the number of people in the area is less than the set threshold and the trigger time is met. People Gathering, Overcrowding Detection: An alarm will be triggered if the number of people in the area is more than the set threshold and the trigger time is met. 	Overcrowding Detection, Absence Detection, People Gathering, Inadequate Worker
Auto-Clear Counting Data	<p>When enabled, the dashboard data will be reset every day.</p> <p>Note: Up to 4 tripwires are allowed for a channel. People counting data is based on the sum of the counting data of the 4 tripwires.</p>	Tripwire People Counting
Detour Area	<p>Vehicle washing detection supports 2 kinds of detection areas:</p> <ul style="list-style-type: none"> Vehicle Washing Area: The drawn area is the default area for analyzing whether vehicles have been washed. Detour Area: Select a drawn area and set Detour Area to Yes. This function is typically used for areas where vehicle entry is prohibited. Any vehicle passing through this area will be reported. <p>Note: After configuration, this function will trigger an alarm if any of the following events is detected in the specified detection area: unwashed vehicle, insufficient vehicle washing water volume, and vehicle bypassing to avoid washing.</p>	Vehicle Washing Detection
Distance Measurement Line (m)	Enter the actual distance of the straight line displayed in the image.	Campus Overspeed Detection, Vehicle Overspeed Detection, Forklift
Default Speed Limit (km/h)	Set the baseline speed limit.	
Speed Limit Ratio of Speeding (%)	An alarm will be triggered if the detected vehicle speed exceeds Default Speed Limit + Default Speed Limit * Speed Limit Ratio of Speeding. The alarm details, including the detected speed, can be view in Behavioral Data .	
Speed Correction (km/h)	<p>Correct speeds within a specified segment. The correction percentage can be either positive or negative; adjust according to the actual conditions.</p> <p>For example, if the speed range is 30-40 km/h and the correction percentage is 10%, and the detected speed is 35km/h, the corrected speed will be 38.5km/h (35+35*10%).</p> <div style="border: 1px solid #ccc; padding: 5px; margin: 5px 0;"> <input type="text" value="30"/> — <input type="text" value="40"/> — <input type="text" value="-"/> <input type="text" value="10"/> <input type="text" value="+"/> % </div> <div style="border: 1px solid #ccc; padding: 5px; margin: 5px 0;"> <input type="text"/> — <input type="text"/> — <input type="text" value="-"/> <input type="text" value="0"/> <input type="text" value="+"/> % </div> <div style="border: 1px solid #ccc; padding: 5px; margin: 5px 0;"> <input type="text"/> — <input type="text"/> — <input type="text" value="-"/> <input type="text" value="0"/> <input type="text" value="+"/> % </div>	
Only capture large dogs	Control whether to identify large dogs only.	
Longest distance without a dog's leash	If a dog is off-leash for a distance that exceeds the threshold, it is considered as risky.	Dog recognition
Allow dog walking time period	An alarm will be triggered if a dog is walked outside the designated time period.	
Vehicle Count Threshold	If the number of vehicles in the area exceeds or meets the threshold, the area is considered as congested.	Campus Congestion Detection, Vehicle
Time Threshold	An alarm will be triggered if the duration of vehicle congestion exceeds or meets the threshold.	

Item	Description	Algorithm
Shield Area	This area does not trigger alarms. To draw the area, left-click to draw 4-6 points and right-click to finish. The area will automatically close.	All Expressway Event Algorithms
Add Lane	<ul style="list-style-type: none"> ● Draw Lane Area: Left-click to draw 4-6 points and right-click to finish. The area will automatically close. ● Draw Driving Direction: Left-click to draw 2 points. The direction is from the start point to the end point. ● Draw Virtual Coil Area: This area is for vehicle speed testing. Draw the area in the middle of the lane area, ensuring the width matches the lane width and the length equals half of the longitudinal length of a small vehicle. ● Lane ID: Used to distinguish between lanes. ● Lane Type: Select the lane type based on the actual drawn area. <p>Example:</p> 	<p>All expressway event algorithms share the same lane configuration.</p> <p>Note:</p>
Ship Type	Select the detectable ship types. Multiple selections are allowed. Currently available types include: Sand Barge, Cargo Ship, Passenger Ship, Other Ships.	Ship Detection
Auto-Detect Direction	When enabled, there is no need to manually draw the escalator running direction. The device will determine the escalator running direction based on the pedestrian movement direction after the configured auto-detect time is reached.	Reverse Motion On Escalator Detection
Auto-Detect Time	Configure the auto-detect time. The configuration supports hours, minutes, and seconds as the time unit.	

4.2 Arming Schedule

Rule Config **Arming Schedule** Linkage Actions

Monday 0 2 4 6 8 10 12 14 16 18 20 22 24

Tuesday 0 2 4 6 8 10 12 14 16 18 20 22 24

Wednesday 0 2 4 6 8 10 12 14 16 18 20 22 24

Thursday 0 2 4 6 8 10 12 14 16 18 20 22 24

Friday 0 2 4 6 8 10 12 14 16 18 20 22 24

Saturday 0 2 4 6 8 10 12 14 16 18 20 22 24

Sunday 0 2 4 6 8 10 12 14 16 18 20 22 24

Key Operations

Drag on the timeline to set the arming schedule, and then click **Save**. The default arming schedule is 24h.

Other Operations

Operation	Description
Copy to Other Days	Used to apply the settings of a day (e.g., Monday) to other days of the week. <ol style="list-style-type: none">1. Select the day (e.g., <input checked="" type="radio"/> Monday).2. Click Copy to Other Days, and then click Save.
Clear All	Click to clear all.

4.3 Linkage Actions

Rule Config
Arming Schedule
Behavior Linkage

Local Config

Link Alarm Output

Alarm Output A->1 A->2 A->3 A->4

Link Audio Output

Enable Open Close Alarm Audio Play Count

Audio Volume

Camera Config

Link Camera Alarm Output[Ⓞ]

Alarm Output D1->1

Link Camera Audio Output[Ⓞ]

Enable Open Close Alarm Audio Play Count

Item	Parameter	Description
Local Config	Link Alarm Output	The 4 options correspond to the 4 alarm output terminals on the device. After connecting a terminal to an output device, please select the corresponding option for linkage.
	Link Audio Output	You can enable/disable audio output linkage and set alarm audio play count and audio volume. For linkage audio, you can configure it in Upload Audio .
Camera Config	Link Camera Alarm Output	Link with camera's alarm output terminal.
	Link Camera Audio Output	You can enable/disable camera audio output linkage and set alarm audio play count.

5 Algorithm Capability Configuration

5.1 Intelligent Parameters

Configure the license plate's region to improve recognition accuracy.

Intelligent Parameters

License Plate Recognition

Detection Area

Save

Select the recognition area and click Save to complete the configuration.

5.2 Local Warehouse Algorithm

1. Select a scenario or algorithm(s) based on your actual needs.

After selecting a scenario, the commonly used algorithms for that scenario will be automatically selected. You can also manually add or remove algorithms as needed.

1. Click **OK**.
2. Go to [Smart Configuration](#) and configure the corresponding algorithms.

Please select scenario(s) or algorithm(s) as needed

Common
Safe Production
Safe Community
Safe School
Smart Hospital
Construction Site
Bright Kitchen

Rural Road
Expressway Servic...
Highway
Gas Station

Clear All

Category	Algorithm Function(19/20)
<input type="checkbox"/> General Functions	<input checked="" type="checkbox"/> Intrusion Detection <input type="checkbox"/> Cross Line Detection <input type="checkbox"/> Enter Area <input type="checkbox"/> Leave Area <input type="checkbox"/> Area People Counting <input type="checkbox"/> Overcrowding Detection <input type="checkbox"/> Tripwire People Counting <input type="checkbox"/> Preset Marker Detection
<input type="checkbox"/> Environment	<input type="checkbox"/> Fire Detection <input type="checkbox"/> Fume Detection <input type="checkbox"/> Obstructed Evacuation Route Detection <input type="checkbox"/> Lost Items <input type="checkbox"/> Trash Bin Open Detection <input type="checkbox"/> Rat Detection <input checked="" type="checkbox"/> Uncovered Bare Soil Detection <input type="checkbox"/> Inspection of Debris Stacking <input type="checkbox"/> Trash Bin Overflow <input type="checkbox"/> Exposed Trash <input type="checkbox"/> Dog identification <input type="checkbox"/> Bagged Trash <input type="checkbox"/> Charging Gun Not In Place Detection <input type="checkbox"/> No Fire Extinguisher Detection <input type="checkbox"/> Dump Truck Without Tarp Detection <input checked="" type="checkbox"/> Oil Leak Detection <input type="checkbox"/> Water Leak Detection <input type="checkbox"/> Gas Leak Detection <input checked="" type="checkbox"/> Test Paper Color Change Detection <input checked="" type="checkbox"/> Illegal Fueling Detection <input type="checkbox"/> Bear Intrusion Detection
<input type="checkbox"/> PPE	<input type="checkbox"/> No Helmet Detection <input type="checkbox"/> No Work Clothes Detection <input type="checkbox"/> No Reflective Clothing Detection <input type="checkbox"/> No Mask Detection <input type="checkbox"/> Shirtless Detection <input type="checkbox"/> No Chef Uniform Detection <input type="checkbox"/> No Chef Hat Detection <input type="checkbox"/> No Safety Harness Detection <input type="checkbox"/> No Safety Belt Detection <input checked="" type="checkbox"/> No Safety Goggles Detection <input type="checkbox"/> No Safety Gloves Detection <input checked="" type="checkbox"/> No Dust/Gas Mask Detection <input checked="" type="checkbox"/> Exposed Long Hair Detection
<input type="checkbox"/> Behavior	<input type="checkbox"/> Sleep On Duty Detection <input checked="" type="checkbox"/> Absence Detection <input type="checkbox"/> Smoking Detection <input type="checkbox"/> Calling Detection <input type="checkbox"/> Using Mobile Phone Detection <input type="checkbox"/> Fall Detection <input type="checkbox"/> Climbing Detection <input checked="" type="checkbox"/> Long Stay Detection <input type="checkbox"/> Fight Detection <input type="checkbox"/> People Gathering <input type="checkbox"/> Quick Moving Detection <input type="checkbox"/> Inadequate Worker <input type="checkbox"/> Knife/Stick in Hand Detection

5.3 AlertFree

AlertFree

+ Add
Batch Delete
Please enter keywords to search

<input type="checkbox"/>	Name	Positive Prompt	Negative Prompt	Alarm Type String	Operation
<input type="checkbox"/>				retest	Edit Delete

1. Click **Add**, configure parameters as needed, then click **OK** to complete the addition.


Parameter	Description
Name	Customizable, used to distinguish different algorithm functions
Positive Prompt	(Optional) Enter a description of the target that requires alarm reporting for this algorithm

Negative Prompt	(Optional) Enter a description of the target that does not require alarm reporting for this algorithm
Alarm Type String	Customizable, can only be described in English
Enable Pre-Detection Target	When enabled, this helps speed up response time and reduce system resource consumption.
Upload Audio	Customize alarm audio, you can play the uploaded alarm sound

2. On the [Local Warehouse Algorithm](#) page, select the newly added algorithm.
3. In the [Smart Configuration](#) page, select channels to add new algorithms. The audio file associated with the audio output linkage is the audio file customized when adding the algorithm.
4. After an alarm is triggered, you can perform searches in the [Data Search](#) page.

6 Data Dashboard

Click **Data Dashboard** in the top right corner to view live videos and alarms. For information about how to configure intelligent analysis, see [Smart Configuration](#).

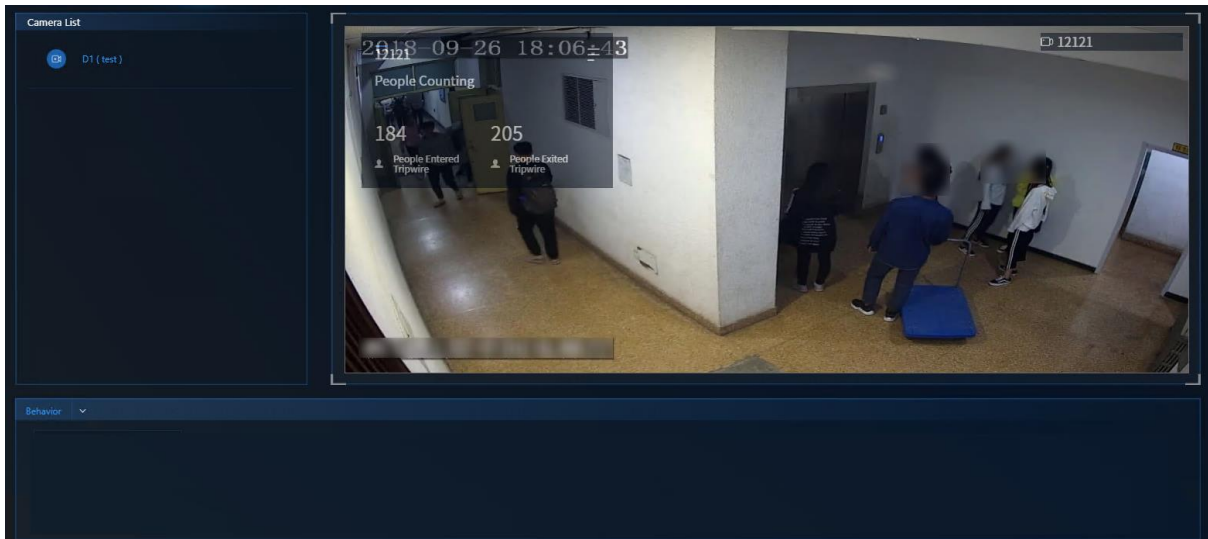


Operation	Description
Switch layout	Hover the mouse over the live video, and then click Switch to 1-Window/Switch to 4-Window to switch the window layout.
Switch channel	1-window: Click a channel on the left-side list to switch the channel. 4-window: Select a window, and then click the desired channel on the left-side list.

7 Library Configuration

7.1 Work Clothes Library

This section describes how to manage work clothes photos in different work clothes libraries. Up to eight work clothes libraries are allowed, and each allows 50 photos. The photos are used for no work clothes detection.

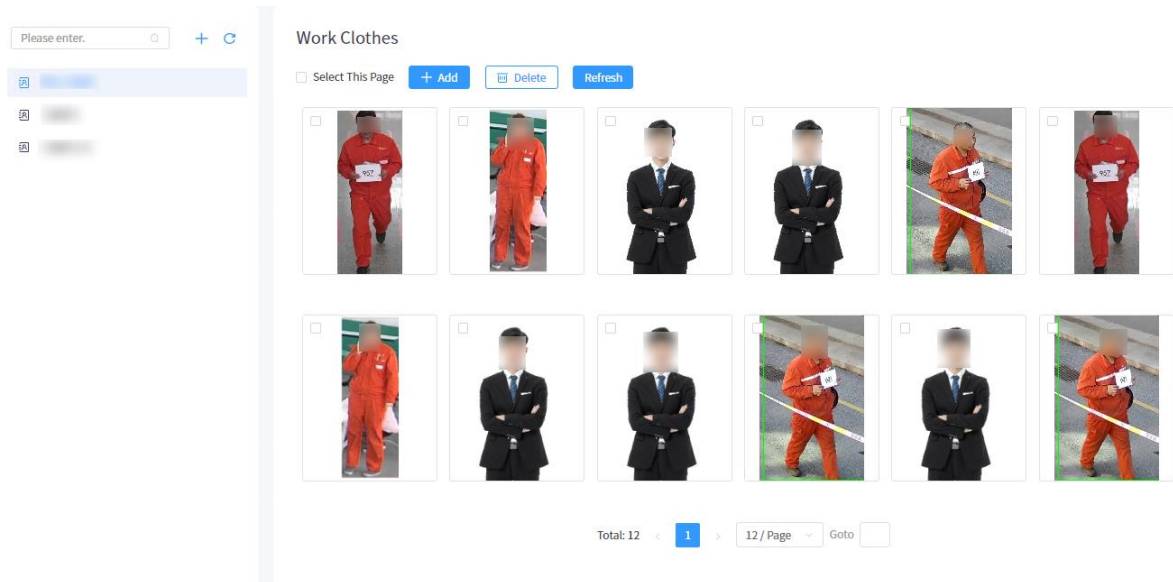

7.1.1 Work Clothes Library Management

- Add a work clothes library: Click **+** on the left, and then enter a name for the work clothes library.
- Edit a work clothes library: Hover over the work clothes library, and then click **Edit** to change the library name.
- Delete a work clothes library: Hover over the work clothes library, and then click **Delete**.
- Search for a work clothes library: Enter keywords in the search box, and then click **🔍** or press **Enter**.
- Refresh work clothes libraries: Click **🔄** to refresh the work clothes library list.



NOTE!

Deleting a work clothes library will also delete all the work clothes data in it.

7.1.2 Work Clothes Management

1. Requirements of Work Clothes Photos

Work clothes must have collars and sleeves, such as suits, white coats, security uniforms, and factory work clothes. Special work clothes such as reflective vests, reflective aprons, and reflective strips are not supported.



NOTE!

- Photos downloaded from the Internet or taken by a mobile phone are not supported.
- The photo resolution should be in this range: 95px*285px to 200px*600px.

2. Add Work Clothes

Key Operations


- Import One by One
 - (1) Click **Add**. Import a work clothes photo from local.
 - (2) Click **Confirm**.
- Import Automatically: Automatically analyzes the selected channel's live video and captures potential work clothes. Then, you need to manually select the desired snapshots to import them to the work clothes library.
 - (3) Click **Auto Import**. Select a channel, and then click **Analyze**.
 - (4) Wait for the analysis results.
 - (5) (Optional) If no usable images are available, click **Re-analyze**.
 - (6) Select the desired snapshot(s), and then click **Import**.

Other Operations

Operation	Description
Delete	<ul style="list-style-type: none"> • Delete one by one: Hover over the work clothes photo, and then click Delete . • Delete in batches: Select the work clothes photos to delete, and then click Delete .
Search	Search by criteria.

7.2 Person Library

Manage persons in different person libraries.

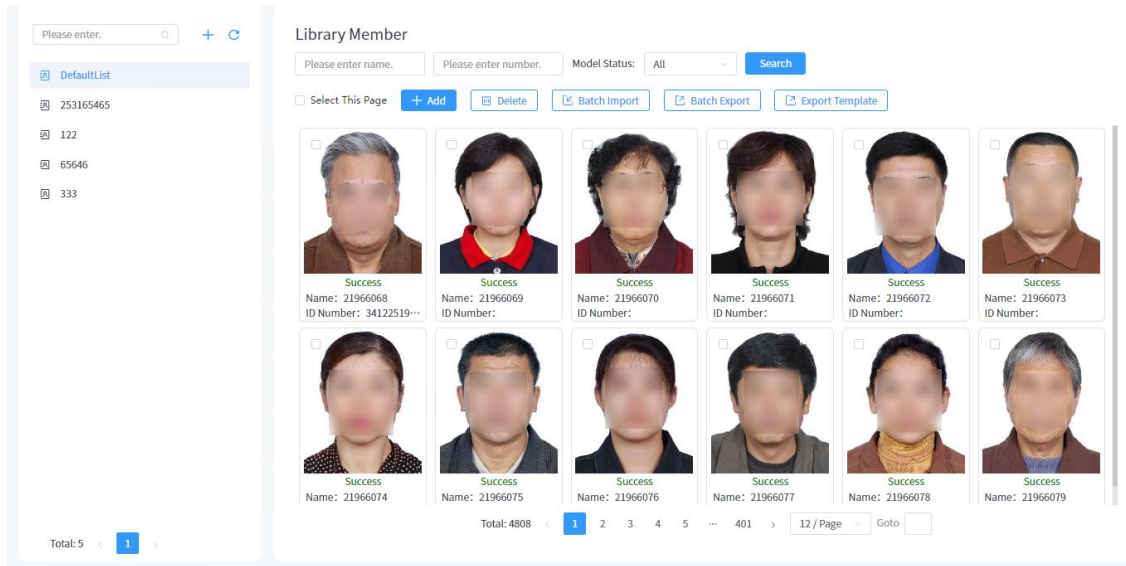

7.2.1 Person Library Management

- Add a person library: Click **+** on the left, and then enter a name for the library.
- Edit a person library: Hover over the person library, and then click **Edit** to change the library name.
- Delete a person library: Hover over the person library, and then click **Delete**.
- Search a person library: Enter keywords in the search box, and then click **Search** or press **Enter**.
- Refresh the person library list: Click **Refresh** to refresh the person library list.



NOTE!

Deleting a person library will also delete all the person data in it.

7.2.2 Person Management

1. Photo Requirements

- Overall requirements: Bareheaded (no hats) and unobstructed (no masks) frontal photos.
- Range requirements: The photo must show the contours of both ears, and the top of the head (including all hair), and down to the bottom of the neck.
- Color requirements: True color photos.
- Makeup requirements: No makeup such as hair dye and eyelashes that may affect the real appearance are allowed.
- Background requirements: A solid-colored background, such as white and blue.
- Light requirements: The photo should be taken with adequate light. There should be no overly dim, overly bright, or uneven lightness (i.e., half shadow and half bright) on the face.
- Photo timeliness requirements: The age depicted in the photo should not be significantly different from the current actual age. The photo should not exceed one year. For individuals with significant changes in hairstyle or bangs, it is recommended to take the photo on the spot.
- Photography equipment requirements: The photo should be taken with a high-quality smartphone or a single-lens reflex camera.

- Photo requirements: JPG format, file size 50KB-2MB; the resolution of the face should be in the range of 640px*640px to 200px*200px; no image alterations such as beautification.

Correct



Wrong



① Dim light



② Blurry face



③ Black and white photo



④ Face too small



⑤ Low resolution



⑥ Side face



⑦ With mask



⑧ With heavy make-up



2. Add Person

Key Operations

1. Add persons one by one or in batches.
 - Add one by one: Click **Add**, select a face photo, and complete the required information.
 - Batch import: Click **Download Template**, complete the required information in the **.csv** file according to instructions in the faceTemplate file, and then click **Upload** to upload the **faceTemplate.tar** file.
2. The system starts modeling when the import is complete. Modeling status include

Status	Description
Ongoing	The face photo is modeling.
Success	The face photo meets the requirements and can be detected and analyzed in live video.
Failed	The face photo does not meet the requirements and cannot be detected or analyzed in live video. You can delete the face photos that failed to be modeled.

Other Operations

Operation	Description
View	Hover over a face photo and then click View .
Edit	Hover over a face photo and then click Edit .
Delete	<ul style="list-style-type: none">● Delete one by one: Hover over a face photo and click  Delete.● Delete in batches: Select the face photos to delete and then click  Delete.
Search	Search face photos by name, ID number, and modeling status.
Export	Export search results. Choose Export This Page or Export Selected and then click Confirm.

8 Analysis & Statistics


8.1 Traffic Event

You can filter data by channel and statistical time. The analysis results of traffic events are displayed in charts.



NOTE!

Before using this function, please enable traffic parameters in [Local Warehouse Algorithm](#).

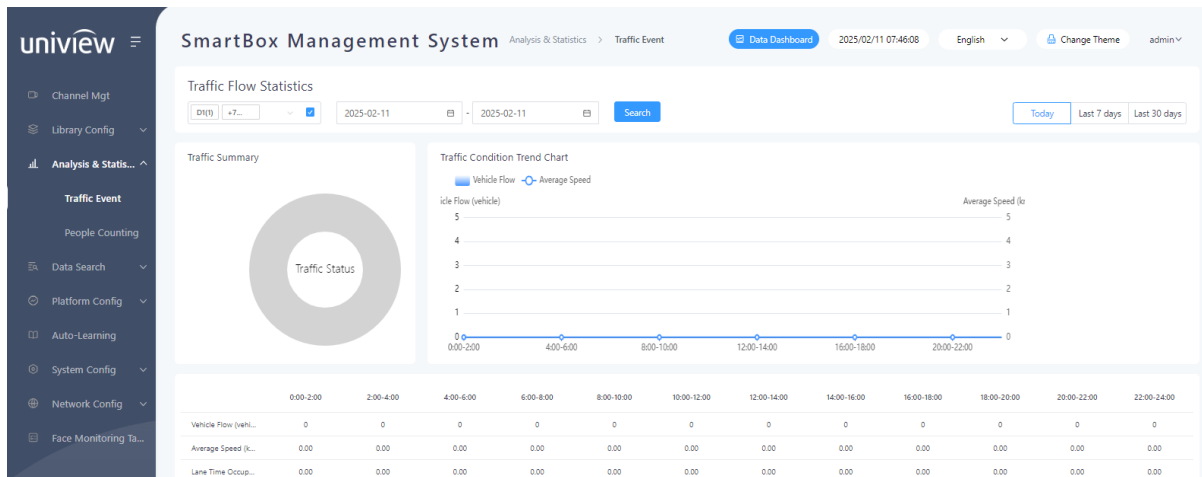

8.2 People Counting


You can filter data by channel, statistical type, and statistical time.



NOTE!

The unit of time (minute, hour, day, month) is determined by the selected statistical type. The time range cannot exceed 60 units of time.

- Search results are displayed in charts, which can be exported for each unit of time.
- Select **Show Channel Detail** to view data from each channel, which can also be exported.

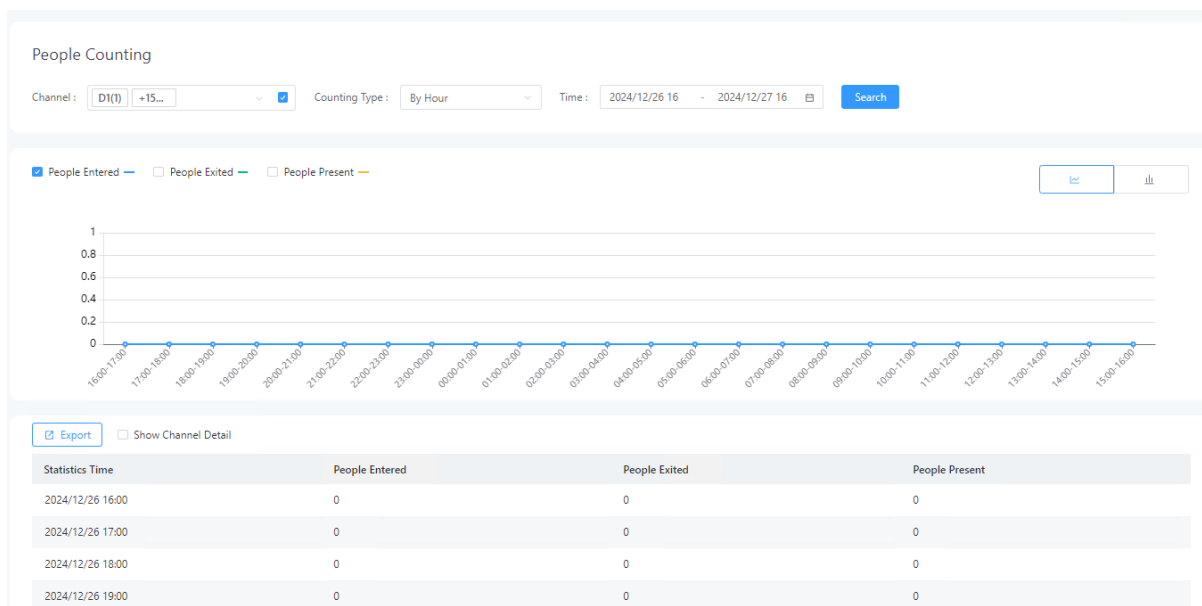

9 Data Search

9.1 Data Search

9.1.1 Behavioral Data

Search analysis results from channels configured with behavior analysis services.

The screenshot displays a search interface for behavioral data. At the top, there are search filters: 'D1(98) +7...', 'Intrusi... +18...', 'Please select detection typ', 'Please enter Plate No.', and 'Match: All'. Below these are date range filters for '2024-08-16 00:00:00' to '2024-08-16 23:59:59' and buttons for 'Search' and 'Refresh'. There are also buttons for 'Select This Page', 'Delete', and 'Export'. The main area shows a grid of 10 search results, each with a blurred image, the text 'Intrusion Detection', and a timestamp. The results are arranged in two rows of five. At the bottom, there is a pagination bar showing 'Total: 3682', a page indicator '1', and a '10 / Page' dropdown.

Key Operations

- Search filters: Channel, event type, object type, plate number, time, and match status.



NOTE!

Match status can be configured only when you select face detection algorithm in [Local Warehouse Algorithm](#).

- For channels with behavior and person identification function enabled, if the behavioral data comparison exceeds the set threshold, the matching image from person library will be displayed on the right side.
- Click [View](#) (hover over the image in **Grid** layout) or double-click the search result to view the snapshot of the analysis result.
- Click [Video](#) (hover over the image in **Grid** layout) to view the alarm video.



NOTE!

To view alarm video, you need to enable **Save Alarm Video** in [Smart Configuration](#).


- Click [Edit](#) to handle the search result. If it is marked as **False Alarm**, this item will be synced to [Sample Library](#), helping to reduce future false alarms.



NOTE!

Intrusion Detection (human), Cross Line Detection, Climbing Detection, Long Stay Detection, Absence Detection support false alarm optimization.

Other Operations

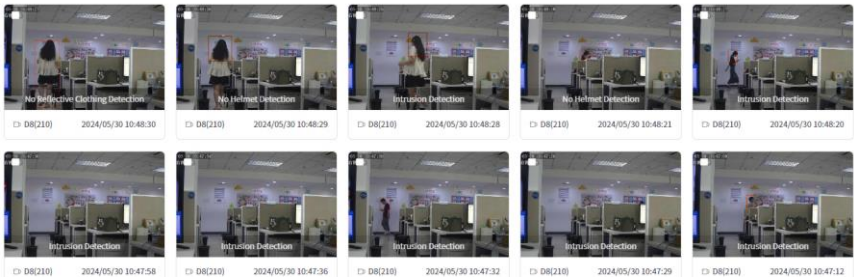Operation	Description																														
Layout	<ul style="list-style-type: none"> ● Grid layout  <ul style="list-style-type: none"> ● List layout <table border="1"> <thead> <tr> <th>Image</th> <th>Channel</th> <th>Alarm Type</th> <th>Alarm Time</th> <th>Plate No.</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td></td> <td>D8(210)</td> <td>Intrusion Detection</td> <td>2024/05/30 10:56:56</td> <td></td> <td>View Video</td> </tr> <tr> <td></td> <td>D8(210)</td> <td>Absence Detection</td> <td>2024/05/30 10:56:54</td> <td></td> <td>View Video</td> </tr> <tr> <td></td> <td>D8(210)</td> <td>Intrusion Detection</td> <td>2024/05/30 10:56:42</td> <td></td> <td>View</td> </tr> <tr> <td></td> <td>D8(210)</td> <td>Intrusion Detection</td> <td>2024/05/30 10:56:41</td> <td></td> <td>View</td> </tr> </tbody> </table>	Image	Channel	Alarm Type	Alarm Time	Plate No.	Operation		D8(210)	Intrusion Detection	2024/05/30 10:56:56		View Video		D8(210)	Absence Detection	2024/05/30 10:56:54		View Video		D8(210)	Intrusion Detection	2024/05/30 10:56:42		View		D8(210)	Intrusion Detection	2024/05/30 10:56:41		View
Image	Channel	Alarm Type	Alarm Time	Plate No.	Operation																										
	D8(210)	Intrusion Detection	2024/05/30 10:56:56		View Video																										
	D8(210)	Absence Detection	2024/05/30 10:56:54		View Video																										
	D8(210)	Intrusion Detection	2024/05/30 10:56:42		View																										
	D8(210)	Intrusion Detection	2024/05/30 10:56:41		View																										
Refresh	Click Refresh to update search results.																														
Delete	Select the search result(s) to delete and click Delete .																														
Export	Export search results. Choose Export This Page or Export Selected and then click Confirm																														

9.1.2 Face Data

Search snapshots from channels configured with face snapshot services.



NOTE!


You need to select face detection algorithm in [Local Warehouse Algorithm](#).

Behavioral Data **Face Data**

D1(98) +7... Please enter name. Please enter ID number. Match: All Gender: All Age: All

Glasses: All Mask: All 2024-08-16 00:00:00 - 2024-08-16 23:59:59 [Search](#) [Refresh](#)

Select This Page [Delete](#) [Export](#) [Grid](#) [List](#)

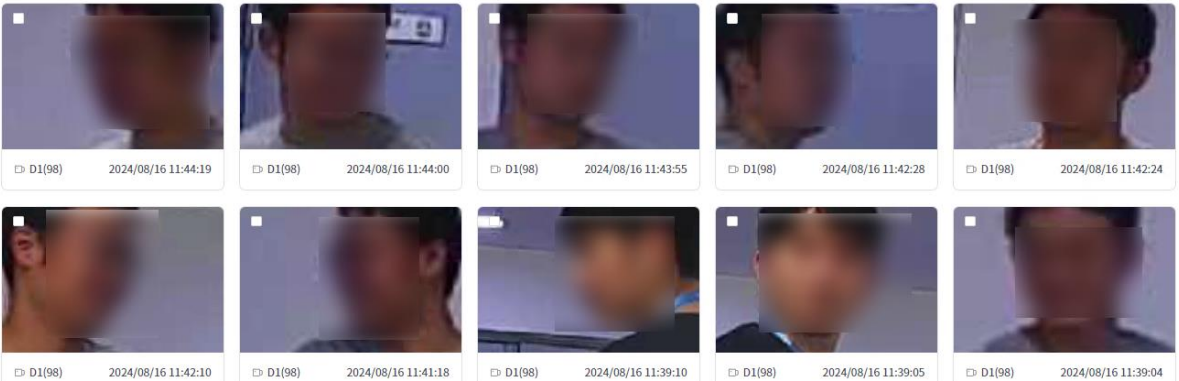


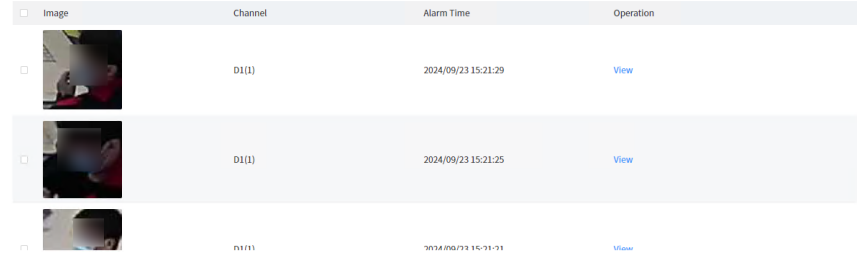
Key Operations

- Search filters: Channel, time, and face attributes.
- For channels with face recognition function enabled, the matching image from person library will be displayed on the right side.



- Click [View](#) (hover over the image in **Grid** layout) or double-click the search result to view the snapshot of the analysis result.
- Click [Video](#) (hover over the image in **Grid** layout) to view the alarm video clip of the analysis result.

Other Operations


Operation	Description
Layout	<ul style="list-style-type: none"> • Click Grid to switch to the grid layout.  <ul style="list-style-type: none"> • Click List to switch to the list layout. 
Refresh	Click Refresh to update search results.
Delete	Select the search result(s) to delete and click Delete .
Export	Export search results. Choose Export This Page or Export Selected and then click Confirm

9.2 Target Search

You can search for targets using the Search Image by Image method.

3. Select a source image.
 - Face Library Upload: Select a face image from the face library. You can search for the image by face library, person name, and ID number.
 - Local Upload: Upload an image from local.
4. Specify the search range.
 - Face Library: Choose the face library where the target is located.
 - Face Snapshots: Select the snapshot channel and time.

- Set the similarity threshold between the target and the source image and maximum number of images can be retrieved.
- Click **Search**. The search results are displayed on the right. You can also hover the mouse over an image and click **View** to view details.

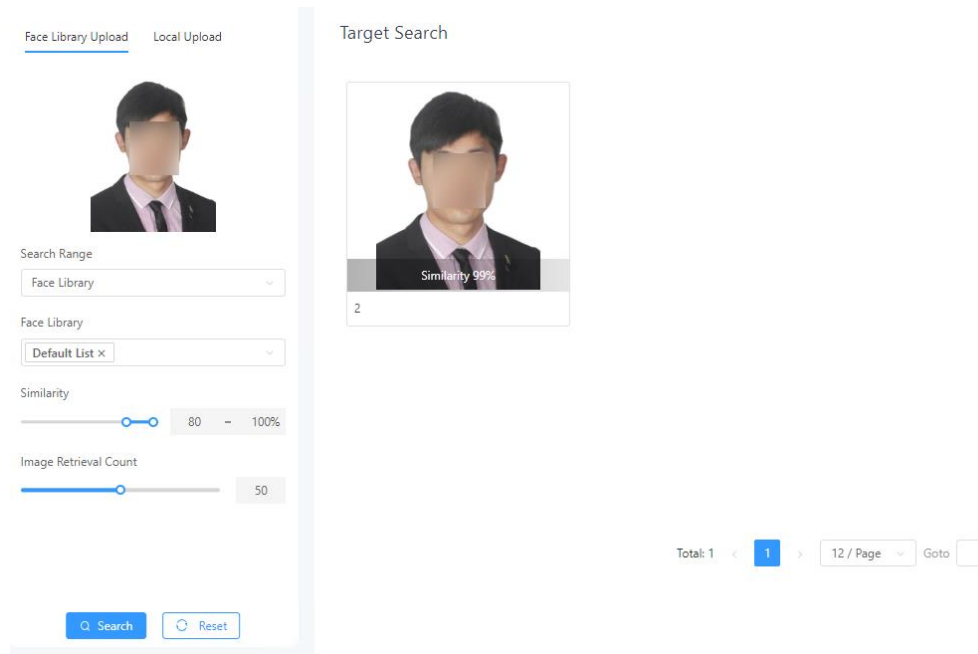

10 Platform Configuration

10.1 Alarm Center

10.1.1 Platform Configuration

When data integration is configured, alarms will be uploaded to the third-party platform by default. For detailed configuration steps, please contact technical support.

- Interface version: Choose the correct interface version.
- Push address: Third-party platform address used to receive data from the smart box.
- Alarm Video Push Address: Only supported in version V1.0; fill as needed.
- Reporting Mode: Choose United or Separate as needed.
- Upload image data: When enabled, the smart box can upload images to the third-party platform.
- Upload video data: When enabled, the smart box can upload videos to the third-party platform.
- Upload channel status: When enabled, the smart box can upload channel status to the third-party platform.
- HTTP/HTTPS keep-alive: When enabled, the smart box will send keep-alive messages to the third-party platform.
- Keep-alive time: Set the interval for the smart box to send keep-alive messages.
- Resume upon disconnection: When enabled, alarms that failed to be reported to the third-party platform due to a disconnection will be re-reported according to the rules set in **Resume mode** after the network is restored.



NOTE!

- If disabled, the alarms that failed to be reported will be retained.
- You can click **View** to view the number of alarms that failed to be reported. After the network is restored, the number of alarms not reported will decrease accordingly.
- You can click **Delete** to remove all alarms that failed to be reported to the third-party platform.

- Resume mode:
 - Resume all: Re-report all alarms that failed to be reported.
 - Resume by day: Set a range of 1-30 days and re-report alarms that failed to be reported within that period.
 - Resume by item: Set a range of 100-20,000 items and re-report the most recent X number of alarms that failed to be reported.
- Push address: Third-party platform address used to receive data from the server.

Platform 1

Interface Version	V2.0	Push Address	https://192.168.110.230:9588/cb Network Detection
Upload Image Data	<input checked="" type="radio"/> Open <input type="radio"/> Close	Upload Video Data	<input checked="" type="radio"/> Open <input type="radio"/> Close
Channel Status	<input checked="" type="radio"/> Open <input type="radio"/> Close	HTTP/HTTPS Keep-alive	<input checked="" type="radio"/> Open <input type="radio"/> Close
Keep-alive Time	- 30 + seconds	Resume Download After Disconnection	Enable <input checked="" type="checkbox"/> View Delete
Resumption Method	Resume All		

Platform 2

Interface Version	V2.0	Push Address	http://ip:port/url or ws://ip:port/url Network Detection
Upload Image Data	<input type="radio"/> Open <input checked="" type="radio"/> Close	Upload Video Data	<input type="radio"/> Open <input checked="" type="radio"/> Close
Channel Status	<input type="radio"/> Open <input checked="" type="radio"/> Close	HTTP/HTTPS Keep-alive	<input type="radio"/> Open <input checked="" type="radio"/> Close
Keep-alive Time	- 30 + seconds	Resume Download After Disconnection	Enable <input type="checkbox"/> View Delete
Resumption Method	<input type="text"/> - <input type="text"/> +		

10.1.2 Upload Time Interval Config

When it is needed to upload data to the third-party platform, you need to configure the platform first (see Platform Configuration). You can set the time interval for uploading alarm analysis results and enable/disable data upload for the channels.

- Upload interval is enabled:
- Upload interval is disabled:

Channel	Upload Interval (min)	Enable
D1(1)	- 60 +	<input type="checkbox"/>
D2(12121)	- 60 +	<input type="checkbox"/>
D3()	- 60 +	<input type="checkbox"/>
D4()	- 60 +	<input type="checkbox"/>
D5()	- 60 +	<input type="checkbox"/>
D6()	- 60 +	<input type="checkbox"/>
D7()	- 60 +	<input type="checkbox"/>
D8()	- 60 +	<input type="checkbox"/>

[Save](#)

10.1.3 Camera Audio Config

Set the camera used for audio output linkage for each channel.

By default, a channel links with its current camera. To link with other cameras, please configure the camera information for the corresponding channel. You can also use the toggle switch to control whether to enable the linkage.

10.2 Video Convergence Platform

Set the target platform for local data reporting.

Video Convergence Platform

Enabled Status Open Close

* Platform Type

* IP/Domain Name

* Port

* appid

* secretkey

* Username

* Password

[Save](#)

Parameter	Description
Platform Type	Please select as needed.

Parameter	Description
IP/Domain Name	Enter the IP address or domain name of the target platform.
Port	Use the default port number (80) or enter the actual port number.
appid	Obtain from the target platform.
secretkey	Obtain from the target platform.
Username	Enter the username of the target platform.
Password	Enter the password of the target platform.

10.3 EZCloud

Enable EZCloud and then click **Save** to manage the smart box on the EZCloud platform. Information that can be uploaded to EZCloud includes alarm records and snapshots (can be enabled or disabled as needed).

Scan the QR code using the UNV-Link app to add the device to the app quickly.



NOTE!

Click **Logout** to delete the device from cloud.

EZCloud

Device Status: Offline

EZCloud Open Close

* Server Address


Register Code

Username

Device Name

Service Agreement <https://ezcloud.uniview.com/doc/termservice.html>

Snapshot Upload Open Close

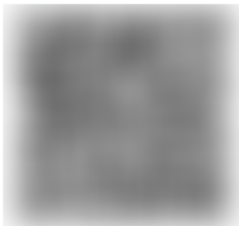Scan QR Code 

Save
Logout

11 Auto-Learning

11.1 Sample Library

The sample library collects samples for algorithm's self-learning, which helps reduce future false alarms.



NOTE!

Currently, only Intrusion Detection (human), Cross Line Detection, Long Stay Detection, Absence Detection, and Climbing Detection support self-learning sample library.

Item	Description
Add	Behavioral data marked as a false alarm are automatically added to the sample library.
Delete	If a data is mistakenly marked as a false alarm, you can select it and click Delete to remove it from the sample library.
Refresh	Refresh the sample library.

11.2 Smart Configuration

Choose whether to enable Auto-Learning. If enabled, when an alarm is triggered, the algorithm will determine whether to report the alarm according to the samples in the library.

[Sample Library](#) [Smart Config](#)

Self-Learning ⓘ : Open Close

12 System Configuration

12.1 User Configuration

- Add user: Click **Add**, and then configure the parameters.

Add User x

* Username

* Password

* User Type

Basic Permission Restart View Logs Upgrade
 Configure

Channel Permission D1 D2 D3 D4 D5 D6
 D7 D8

- Modify permissions

Modify x

Basic Permission Restart View Logs Upgrade
 Configure

Channel Permission D1 D2 D3 D4 D5 D6
 D7 D8

- Change password:

Change Password x

* Old password

* New Password

Password Strength :

* Confirm new password

* Email



NOTE!

Only admin can modify the email address.

- Delete user

12.2 Time Configuration

The system's default time zone is UTC +00:00.

- Set Time Manually: Set the date and time manually, or click **Sync with Computer** to sync with the computer time.
- Sync with NTP Server: Enable this function and set the NTP server address, port, and time sync interval.

12.3 Security

12.3.1 SSH

When enabled, you can access the smart box's background to perform management operations via the SSH protocol.

The screenshot shows a configuration panel with two tabs: 'SSH' (selected) and 'IP Address Filtering'. Under the 'SSH' tab, there is a toggle switch for 'SSH' which is currently turned off. Below this is a section labeled 'Dynamic Factor'.

12.3.2 IP Address Filtering

Use IP address to allow or forbid access to the smart box.

- Off: IP address filtering is disabled.
- Blocklist: Access from IP addresses on the blocklist is forbidden. Up to 64 IP addresses are allowed on the blocklist.
- Allowlist: Only access from IP addresses on the allowlist is allowed. Up to 64 IP addresses are allowed on the allowlist.

The screenshot shows the 'IP Address Filtering' configuration panel. It has two tabs: 'SSH' and 'IP Address Filtering' (selected). Under the 'IP Address Filtering' tab, there are three radio buttons: 'Close' (selected), 'Blocklist', and 'Allowlist'. A blue 'Save' button is located at the bottom left of the panel.

12.3.3 HTTPS

When enabled, the system can be accessed via HTTPS. A certificate is a unique electronic document on the Internet representing individuals and resources, ensuring secure and confidential communication between entities. Please select a certificate type as needed. Installed certificates can also be deleted.

Certificate Type	Application Scenarios
Private Certificate: Fill in the certificate information and install a digital certificate created by the software developer.	Suitable for scenarios with low security requirements.
Install Signed Certificate: Directly install a certificate signed and certificated by a professional institution.	Suitable for scenarios with high security requirements.
Request, Install Signed Certificate: You need to manually create a certificate request and get it signed by a professional institution, and then install it.	

Private Certificate

Click **Create**. Fill in the certificate information, and then click **Confirm**. Click **Save**.

Create Certificate ×

* Country	<input type="text" value="CN"/> <small>Example: CN</small>	* Hostname/IP	<input type="text"/> <small>1-43 characters</small>
* Valid Days	<input type="text" value="1"/> <small>1-5000</small>	Province/State	<input type="text"/> <small>0-43 characters</small>
Region	<input type="text"/> <small>0-43 characters</small>	Organization	<input type="text"/> <small>0-43 characters</small>
Organizational Unit	<input type="text"/> <small>0-43 characters</small>	Email	<input type="text"/> <small>0-43 characters</small>

Install Signed Certificate

Click **Browse**. Select a certificate from local, and then click **Upload**. Click **Save**.

HTTPS Open Close

Certificate Type Private Install Signed Certificate Request, Install Signed Certificate

Install Signed Certificate

Request, Install Signed Certificate

1. Click **Create**. Fill in the certificate information, and then click **Confirm**.
2. Click **Download** to obtain the certificate request. Then, get it signed by a professional institution.
3. Click **Browse**. Select a certificate from local, and then click **Upload**. Click **Save**.

HTTPS Open Close

Certificate Type Private Install Signed Certificate Request, Install Signed Certificate



Create Certificate

Created Certificate Request

Property

Install Signed Certificate

12.4 Maintenance

- Upgrade the version: Click , locate the upgrade package (contact technical support for the package), and then click **Upgrade** or **Complete Upgrade**.
 - Upgrade: The configuration and alarm data of the current version will be kept.
 - Complete Upgrade: All the configuration and alarm data of the current version will be deleted.
- Restore default settings: Click **Restore** to restore default settings. You may choose whether to keep the current network settings and user settings.
- Restart the device: Click **Restart** to restart the device
- Import or export configuration: Click , set the path, and then click **Import** or **Export**.
- Export diagnosis information: Click **Export** to export diagnosis information.
- Hard disk management: You can format the hard disk when encountering issues such as disk mounting failure, disk offline, full storage, etc.
- Local interface preview configuration: You can adjust the local interface resolution according to actual requirements.

12.5 Version Information

You can view the version information, and set the device name and device ID.

Version Info

Device Name	<input type="text" value="ECS-"/>
Device ID	<input type="text" value="1"/>
Model	ECS-!
Language	English
Serial No.	
Firmware Version	ECS_
Operation Time	3hour7minute39second

12.6 Personalization


12.6.1 Logo and Name

Set a custom logo and system name.

- To customize the logo, click the current logo and select an image from local.

- To customize the name, select **Custom Name** and enter a custom name in the entry box.

System Logo



[Restore Default Style](#)

Recommended image resolution: 160px * 160px or multiples of 160px * multiples of 160px., The logo image can only be JPG, JPEG, or PNG format.

Image less than 5M

[Save](#)

System Name: Restore Defaults Custom Name

*Note: You can customize the system name with letters and digits (up to 32 characters).

[Save](#)

12.6.2 Upload Audio

You can customize alarm audio for different intelligent services. The custom audio supports WAV format only, with 16-bit or 32-bit depth, and a sampling rate of 16000-48000.

1. Click **Upload** for an algorithm and select an audio file from local.
2. Click **Play on PC** to output the audio file through the local PC for checking.
3. (Optional) If a custom audio is no longer needed, you can click **Restore Default Audio** to revert to the system's default alarm audio.


Logo and Name Upload Audio PC Alarm Settings

Algorithm Name	Audio Source	Operation
Illegal Fueling Detection	Default Audio	Restore Default Audio Play on PC Upload
Forklift Detection	Default Audio	Restore Default Audio Play on PC Upload
Forklift Overspeed Detection	Default Audio	Restore Default Audio Play on PC Upload
Construction Vehicle Detection	Default Audio	Restore Default Audio Play on PC Upload

12.6.3 PC Alarm Settings

Set channel's alarm linkage with PC.

- **Alarm Pop-up Window:** When enabled, if an alarm is triggered on the channel, a pop-up window containing alarm information will be displayed on the lower-right corner.

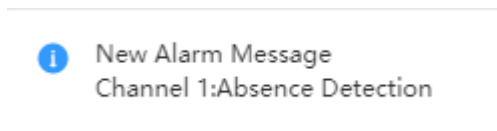

- **Alarm Audio:** When enabled, if an alarm is triggered on the channel, the PC will play a notification sound to notify you.

12.7 Network Information

12.7.1 Packet Capture

Choose the NIC whose packets you want to capture, and then set the packet size, IP address, port number, and select **All/Specify/Filter** as needed, and then click **Start Capture** to start capturing packets. When finished, you can click **Export** to export the captured packets and analyze them using Wireshark.



NOTE!

- The maximum size of the captured packets is 65535 bytes or 100MB.
- When **Specify** is selected, only packets of the specified port/ IP will be captured.
- When **Filter** is selected, packets of the specified port/IP will be filtered and not captured; while other packets will be captured.

12.7.2 Network Resource Statistics

The page displays information about the smart box's network resources. The information refreshes every 5s.

Type	Bandwidth
IPC Connection	10Mbps
Remote Live View	0bps
Idle Receive Bandwidth	150Mbps
Idle Send Bandwidth	160Mbps

12.7.3 Network Test

Test network conditions between Smart Box and the target IP address. Packet size can be adjusted based on the actual network conditions.

Network Delay and Packet Loss Test

* IP Address

* Packet Size (byte)

Test Result

12.8 Online User

View the online users and the corresponding login IP and login time.

Online User

[Force Offline](#)

<input type="checkbox"/>	Username	IP Address	Login Time
<input type="checkbox"/>	admin	217.1.1.123	2024/05/29 15:10:13
<input type="checkbox"/>	admin	217.1.1.69	2024/05/29 17:41:09
<input type="checkbox"/>	admin	217.1.2.89	2024/05/29 17:16:24



NOTE!

Only admin can force a user to go offline.

12.9 Operation Logs

Search operation logs by time range and log type (main type and sub type).

Operation Log

Time: - Main Type: Sub Type: [Search](#)

Username	Operation Time	IP Address	Channel ID	Main Type	Sub Type	Detailed Info
admin	2024/05/29 17:41:09	217.1.1.69		Operation	Login	
admin	2024/05/29 17:36:09	217.1.2.89		Operation		
admin	2024/05/29 17:35:48	217.1.2.89		Operation		

13 Network Configuration

13.1 TCP/IP

Basic Information

Click **Edit** to edit the basic network information.

- Static: Click **Static**, and then set the IP address, subnet mask, and default gateway manually.
- DHCP: Use DHCP to automatically assign the IP address, subnet mask, and default gateway.



NOTE!

If the smart box needs to connect to both the WAN and LAN, you need to set up a dual-NIC configuration.

DNS Server

Choose a reliable and trustworthy DNS server to avoid security risks. If the preferred DNS server is unavailable, the alternate server will take over automatically.

Default NIC

Choose a preferred NIC for network communication and data transmission, and then click **Save**.

13.2 Port

You can configure the HTTP port, HTTPS port, and SSH port as needed. For subsequent accesses, you need to add the corresponding port number, for example, `http://ip:80`.

13.3 Custom Route

Click **Add** to add a custom route.

Add Custom Route ×

Status Open Close

NIC

* IP Segment

* Subnet Mask


* Default Gateway

14 Face Monitoring Task Search

Search for face monitoring tasks by task type, whether they are configured locally or by the upper-level platform. Up to 16 monitoring tasks can be configured for a channel. You can also delete tasks that are no longer needed.

Face Monitoring Task Search

Task Type

Task Name	Monitoring Threshold	Monitoring Type	Monitoring Time	Arming & Linkage	Operation
 No Data					



NOTE!

- For local task configuration, please refer to [Smart Configuration](#).
- The upper-level platform cannot access the tasks configured locally.